


Analysis of the stability of a slope slice

GGU-SLICE

VERSION 5

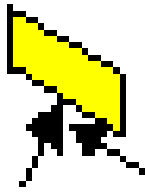

Last revision: September 2008
Copyright: GGU Zentrale Verwaltung mbH, Braunschweig
Technical implementation and sales: Civilserve GmbH, Steinfeld

Contents:

1	Preface	4
2	Licence protection and installation	4
3	Language selection.....	5
4	Starting the program.....	5
5	Description of menu items.....	6
5.1	File menu.....	6
5.1.1	"New" menu item.....	6
5.1.2	"Load" menu item.....	6
5.1.3	"Save" menu item	6
5.1.4	"Save as" menu item.....	6
5.1.5	"Printer preferences" menu item.....	7
5.1.6	"Print and export" menu item	7
5.1.7	"Batch print" menu item	9
5.1.8	"Exit" menu item.....	9
5.1.9	"1, 2, 3, 4" menu items.....	9
5.2	Edit menu	10
5.2.1	"Project identification" menu item.....	10
5.2.2	"Analysis options" menu item.....	10
5.2.3	"System parameters" menu item	10
5.2.3.1	Single layer system.....	11
5.2.3.2	Multi-layer system.....	12
5.2.3.3	System with geodrid.....	13
5.2.4	"Soils" menu item	14
5.3	System menu	15
5.3.1	"Results" menu item	15
5.3.2	"Optimise" menu item.....	15
5.3.3	"Search for critical slip surface" menu item	16
5.3.4	"Monto-Carlo simulation" menu item.....	17
5.4	Output preferences menu	19
5.4.1	"File name legend" menu item.....	19
5.4.2	"System legend" menu item.....	20
5.4.3	"Input data legend" menu item	21
5.4.4	"Results legend" menu item.....	22
5.4.5	"Soil properties legend" menu item	23
5.4.6	"Page size and margins" menu item.....	24
5.4.7	"With borders" menu item	24
5.4.8	"Move objects" menu item.....	24
5.5	Graphics preferences menu	25
5.5.1	"Refresh and zoom" menu item	25
5.5.2	"Zoom info" menu item	25
5.5.3	"Legend font selection" menu item.....	25
5.5.4	"Pen colour and width" menu item	25
5.5.5	"Header toolbar" menu item	26
5.5.6	"Toolbar preferences" menu item	26

5.5.7	"Load graphics preferences" menu item	27
5.5.8	"Save graphics preferences" menu item.....	27
5.6	? menu	28
5.6.1	"Copyright" menu item	28
5.6.2	"Help" menu item	28
5.6.3	"GGU on the web" menu item	28
5.6.4	"GGU support" menu item.....	28
5.6.5	"What's new?" menu item.....	28
5.6.6	"Language preferences" menu item	28
6	Tips.....	29
7	Worked examples.....	30
7.1	Single layer system.....	30
7.1.1	Systemdaten	30
7.1.2	Calculations using old standard	30
7.1.3	Calculations using new standard.....	30
7.2	Multi-layer system.....	31
7.3	System with geogrid.....	31
7.3.1	System parameters	31
7.3.2	Calculations using old standard	31
7.3.3	Calculations using new standard.....	32
8	Index.....	33

1 Preface

The **GGU-SLICE** program facilitates the analysis of a slope slice to DIN 4084 or in accordance with the Recommendations of the Working Group on "*Geotechnical Aspects of Landfill and Brownfield Sites*" (*Geotechnik der Deponien und Altlasten - GDA*).

You can choose to design a single layer system, a multi-layer system or a system using geogrids.

Analysis can be performed using either the *global safety factor concept* given in DIN 1054 (old) or the *partial safety factor concept* given in DIN 1054 (new).

Data input is in accordance with WINDOWS conventions and can therefore be learned almost without a manual. Graphics output supports the true-type fonts supplied with WINDOWS, so that excellent layout is guaranteed. Colour output and any graphics (e.g. files in formats BMP, JPG, PSP, TIF, etc.) are supported. DXF files can also be imported by means of the integrated Mini-CAD module (see the "**Mini-CAD**" manual).

The program system has been thoroughly tested. No faults have been found. Nevertheless, liability for completeness and correctness of the program and the manual, and for any damage resulting from incompleteness or incorrectness, cannot be accepted.

2 Licence protection and installation

In order to guarantee a high degree of quality, a hardware-based copy protection system is used for the **GGU-SLICE** program.

The GGU software protected by the *CodeMeter* copy protection system is only available in conjunction with the *CodeMeter stick* copy protection component (hardware for connection to the PC, "*CM stick*"). Because of the way the system is configured, the protected software can only be operated with the corresponding CM stick. This creates a fixed link between the software licence and the CM stick copy protection hardware; the licence as such is thus represented by the CM stick. The correct Runtime Kit for the CodeMeter stick must be installed on your PC.

Upon start-up and during running, the **GGU-SLICE** program checks that a CM stick is connected. If it has been removed, the program can no longer be executed.

For installation of GGU software and the CodeMeter software please refer to the information in the *Installation notes for GGU Software International*, which are supplied with the program.

3 Language selection

GGU-SLICE is a bilingual program. The program always starts with the language setting applicable when it was last ended.

The language preferences can be changed at any time in the "?" menu, using the menu item "**Spracheinstellung**" (for German) or "**Language preferences**" (for English).

4 Starting the program

After starting the program, you will see two menus at the top of the window:

- File
- ?

After clicking the "**File**" menu, either an existing file can be loaded by means of the "**Load**" menu item, or a new system can be created using "**New**". Then, the menu bar will show eight menus:

Nach dem Anklicken des Menütitels "**Datei**" können Sie entweder über den Menüeintrag "**Laden**" ein bereits bearbeitetes System laden oder über "**Neu**" ein neues System erstellen. Am oberen Fensterrand erscheinen anschließend sechs Menütitel:

- File
- Edit
- System
- Output preferences
- Graphics preferences
- ?

After clicking one of these menus, the menu items roll down, allowing you access to all program functions.


The program works on the principle of *What you see is what you get*. This means that the screen presentation represents, overall, what you will see on your printer. In the last consequence, this would mean that the screen presentation would have to be refreshed after every alteration you make. For reasons of efficiency and as this can take several seconds for complex screen contents, the GGU-SLICE screen is not refreshed after every alteration. If you would like to refresh the screen contents, press either [F2] or [Esc]. The [Esc] key additionally sets the screen presentation back to your current zoom, which has the default value 1.0, corresponding to an A4 format sheet.

5 Description of menu items

5.1 File menu

5.1.1 "New" menu item

Use this menu item to create a new system.

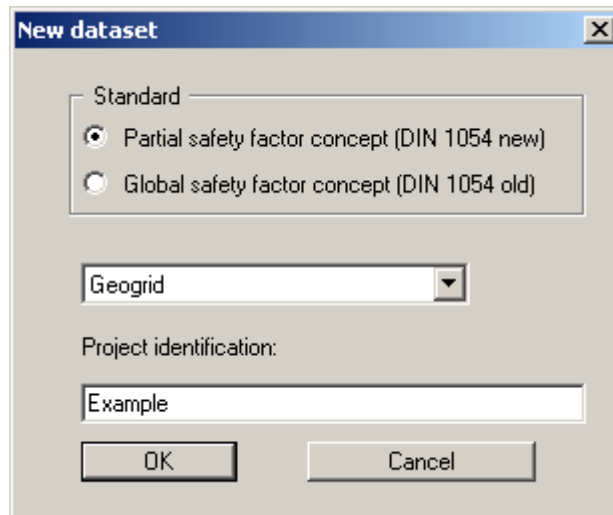

In the upper group box of this dialogue box select the safety factor concept for analysing your new system. The type of system can be defined in the middle drop-down list box (single layer, multi-layer or system with geogrid).

You may elect to enter a descriptive project identification, which will subsequently be entered in the *file name legend* (see Section 5.4.1).

5.1.2 "Load" menu item

You can load a file with system data, which was created and saved at a previous sitting, and then edit the system.

5.1.3 "Save" menu item

You can save data entered or edited during program use to a file, in order to have them available at a later date, or to archive them. The data is saved without prompting with the name of the current file. Loading again later creates exactly the same presentation as was present at the time of saving.

5.1.4 "Save as" menu item

You can save data entered during program use to an existing file or to a new file, i.e. using a new file name. For reasons of clarity, it makes sense to use ".lam" as file suffix, as this is the suffix used in the file requester box for the menu item "File/Load". If you choose not to enter an extension when saving, ".lam" will be used automatically.


5.1.5 "Printer preferences" menu item

You can edit printer preferences (e.g. swap between portrait and landscape) or change the printer in accordance with WINDOWS conventions.

5.1.6 "Print and export" menu item

You can select your output format in a dialogue box. You have the following possibilities:


- **"Printer"**
allows graphic output of the current screen contents. to the WINDOWS standard printer or to any other printer selected using the menu item **"File/Printer preferences"**. But you may also select a different printer in the following dialogue box by pressing the **"Printer prefs./change printer"** button.

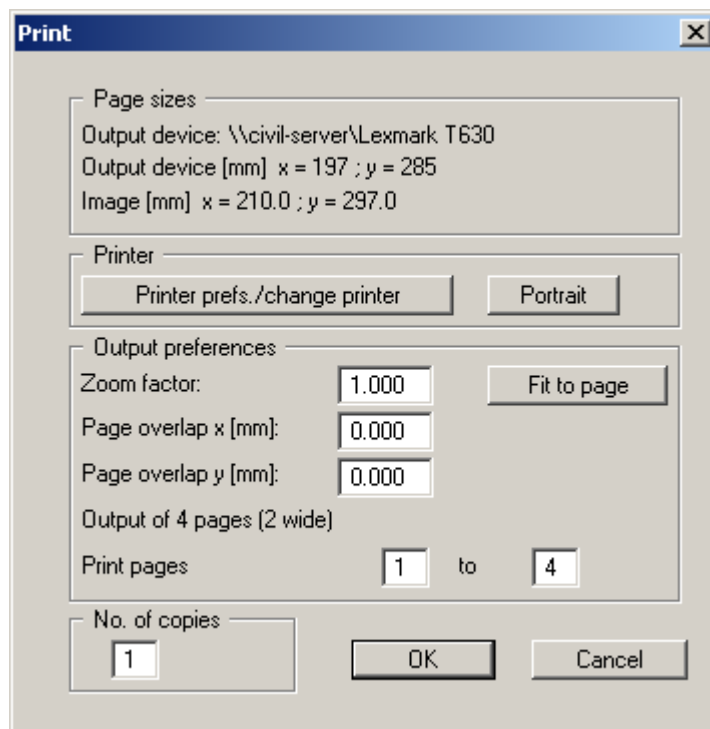

In the upper group box, the maximum dimensions which the printer can accept are given. Below this, the dimensions of the image to be printed are given. If the image is larger than the output format of the printer, the image will be printed to several pages (in the above example, 4). In order to facilitate better re-connection of the images, the possibility of entering an overlap for each page, in x and y direction, is given. Alternatively, you also have the possibility of selecting a smaller zoom factor, ensuring output to one page ("**Fit to page**" button). Following this, you can enlarge to the original format on a copying machine, to ensure true scaling. Furthermore, you may enter the number of copies to be printed.

- **"DXF file"**
allows output of the graphics to a DXF file. DXF is a common file format for transferring graphics between a variety of applications.

- **"GGUCAD file"**
allows output of the graphics to a file, in order to enable further processing with the GGUCAD program. Compared to output as a DXF file this has the advantage that no loss of colour quality occurs during export.
- **"Clipboard"**
The graphics are copied to the WINDOWS clipboard. From there, they can be imported into other WINDOWS programs for further processing, e.g. into a word processor. In order to import into any other WINDOWS program you must generally use the *"Edit/Paste"* function of the respective application.
- **"Metafile"**
allows output of the graphics to a file in order to be further processed with third party software. Output is in the standardised EMF format (Enhanced Metafile format). Use of the Metafile format guarantees the best possible quality when transferring graphics.


If you select the **"Copy/print area"** tool  from the toolbar, you can copy parts of the graphics to the clipboard or save them to an EMF file. Alternatively you can send the marked area directly to your printer.

Using the **"Mini-CAD"** program module you can also import EMF files generated using other GGU applications into your graphics.

- **"MiniCAD"**
allows export of the graphics to a file in order to enable importing to different GGU applications with the MiniCAD module.
- **"GGUMiniCAD"**
allows export of the graphics to a file in order to enable processing in the GGUMiniCAD program.
- **"Cancel"**
Printing is cancelled.

5.1.7 "Batch print" menu item

If you would like to print several appendices at once, select this menu item. You will see the following dialogue box:

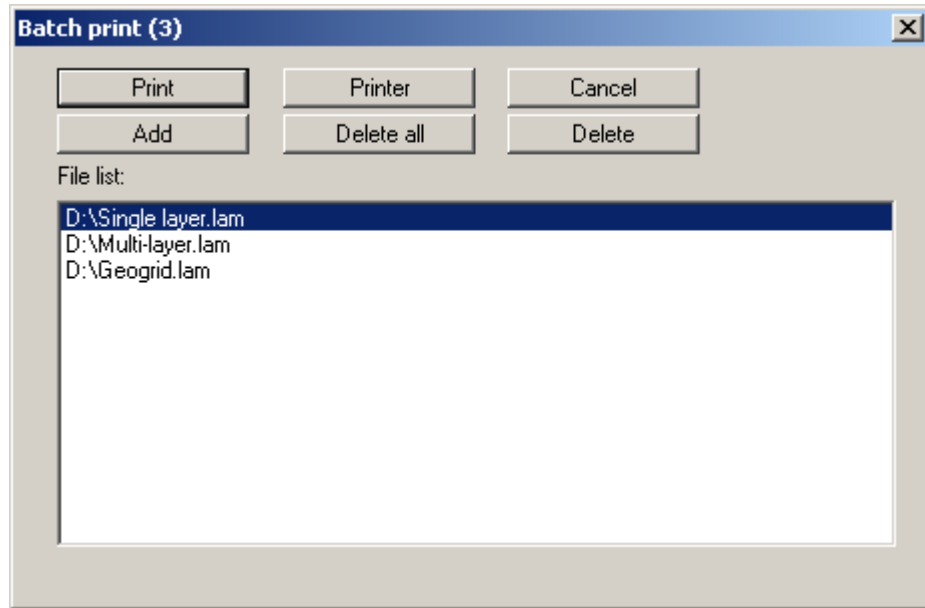

Create a list of files for printing using "**Add**" and selecting the desired files. The number of files is displayed in the dialogue box header. Using "**Delete**" you can mark and delete selected individual files from the list. After selecting the "**Delete all**" button, you can compile a new list. Selection of the desired printer and printer preferences is achieved by pressing the "**Printer**" button.

You then start printing by using the "**Print**" button. In the dialogue box which then appears you can select further preferences for printer output such as, e.g., the number of copies. These preferences will be applied to all files in the list.

5.1.8 "Exit" menu item

After a confirmation prompt, you can quit the program.


5.1.9 "1, 2, 3, 4" menu items

The "**1, 2, 3, 4**" menu items show the last four files worked on. By selecting one of these menu items the listed file will be loaded. If you have saved files in any other folder than the program folder, you can save yourself the occasionally onerous *rummaging* through various sub-folders.

5.2 Edit menu

5.2.1 "Project identification" menu item

You can enter a description of the current system; this will then be used in the *file name legend* (see Section 5.4).

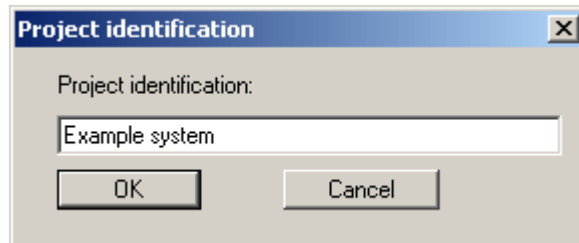

5.2.2 "Analysis options" menu item

The safety concept and the type of system can be changed by going to this menu item. You will see almost the same dialogue box as for the menu item "**File/New**".

5.2.3 "System parameters" menu item

The system geometry is defined using this menu item. Different input boxes open depending on the type of system selected.

5.2.3.1 Single layer system

In a single layer system the system geometry is defined using the following dialogue box.

The 'System parameters' dialog box is divided into three main sections:

- System:** Includes input fields for Slope angle [°] (18.435), Position of slip surface [m] (1.200), and Groundwater level [m] (0.400). A 'Calculate groundwater level' button is located below these fields.
- Soil properties:** Includes input fields for Friction angle [°] (27.500), Cohesion [kN/m²] (5.000), and Unit weight [kN/m³] (19.000).
- Partial factor:** Includes an input field for Shear coefficients (1.250).

'OK' and 'Cancel' buttons are positioned at the bottom of the dialog.

You enter the slope angle, the position of the slip surface and a groundwater level in [m] below the crest of the slope. Alternatively, the water table can be calculated as a ponding depth after **DRESCHER**. To do this, click the "Calculate groundwater level" button. You will see a dialogue box for entering the appropriate values for the rainfall event and can then have the results calculated by the program by clicking "Calculate". The program displays the results of the groundwaterDrescher level calculations in a message box:

The 'Info' dialog box displays the following information:

- Ponding depth = 0.0316 m
- ==> GW level = 1.1684 m
- Use value ?

'Yes' and 'No' buttons are located at the bottom of the dialog.

If you click "Yes" the groundwater level is adopted in the "System parameters" dialogue box.

In the central group box of the main dialogue box you can define the soil properties for a single layer system. If, as shown in the above dialogue box, you selected the *partial safety factor concept*, you will see a further input box for the partial safety factors of the shear coefficients.

5.2.3.2 Multi-layer system

For a multi-layer system you will see the following dialogue box for defining the system geometry.

The dialog box titled "System parameters" contains the following fields and buttons:

- System**
 - Slope angle [°]: 18.435
 - Position of slip surface [m]: 1.100
 - Groundwater level [m]: 0.500
 - Calculate groundwater level
- Partial safety**
 - Shear coefficients: 1.250
- OK
- Cancel

The soil properties are defined in the multi-layer system-specific "**Edit/Soils**" menu item (see Section 5.2.4). If you are using the *partial safety factor concept*, you can also enter the partial safety factor for the shear coefficients in the dialogue box.

5.2.3.3 System with geogrid

If your system employs a geogrid you will see an extended dialogue box when using this menu item:

Section	Parameter	Value
Slope	Angle [°]	18.435
	Length [m]	21.500
	Partial factors	
	Sliding:	1.100
	Permanent actions:	1.350
	Changeable actions:	1.500
Soil	Thickness [m]	1.100
	gamma [kN/m³]	19.000
	gamma' [kN/m³]	11.000
	Friction angle [°]	27.500
	<input type="checkbox"/> With active earth pressure Ea	
	<input checked="" type="checkbox"/> With passive Ep	
	Partial safety (Ep):	1.400
Water	Design rainfall [l/s/ha]:	120.0
	Permeability [m/s]:	1.00E-3
	Runoff coeff. [-]:	1.000
	GW (constant) [m]:	0.000
Geogrid	Short-term strength [kN/m]:	150.000
	Factor A1 [-]:	1.670
	Factor A2 [-]:	1.400
	Factor A3 [-]:	1.000
	Factor A4 [-]:	1.000
	Partial safety (Geogrid) [-]:	1.400
	Friction angle [°]:	14.000
	Cohesion [kN/m²]:	5.000
Installation equipment	Weight [kN]:	110.000
	Width [m]:	2.000
	Impact factor [-]:	1.250
	Braking force component [-]:	0.333

You enter the governing values for the slope, soil, water, geogrids and installation equipment in the respective group boxes. If the *partial safety factor concept* is selected you can also enter the respective partial safety factors in the dialogue box.

5.2.4 "Soils" menu item

This menu item is only activated for multi-layer systems.

The soil properties input for other systems is carried out in the menu item "**Edit/System parameters**".

In a multi-layer system the system's soil properties are defined in the following dialogue box:

- Base of soil layer [m]
- Unit weight of moist soil γ [kN/m³]
- Unit weight of buoyant soil γ' [kN/m³]
- Friction angle ϕ [°]
- Cohesion c [kN/m²]

	Designation	Base [m]	gamma [kN/m ³]	gamma' [kN/m ³]	phi [°]	Cohesion [kN/m ²]
1	Topsoil	1.00	20.0	19.0	27.5	0.00
2	Drainage layer	1.30	19.0	18.0	35.0	0.00
3	KDB	1.32	19.0	18.0	15.0	0.00
4	Clay	1.82	21.0	20.0	20.0	0.00
5	Levelling course	2.32	19.0	18.0	32.5	0.00

If you would like to display a soil structure using either less or more layers, you can define the necessary number of layers using the "**Edit no. of soils**" button. Click the "**Sort**" button to sort the soil layers according to depth; however, this is performed automatically when you click "**OK**" to leave the dialogue box. This eliminates the possibility of input errors.


You can also use this function to eliminate a soil from the table.

Simply assign the soil to be eliminated a greater layer depth and then click the "**Sort**" button. The corresponding soil is now the last soil in the table and can be *deleted* by reducing the number of soils.

5.3 System menu

5.3.1 "Results" menu item

You will see a message box containing the results of the analysis of the user-defined slip surface.

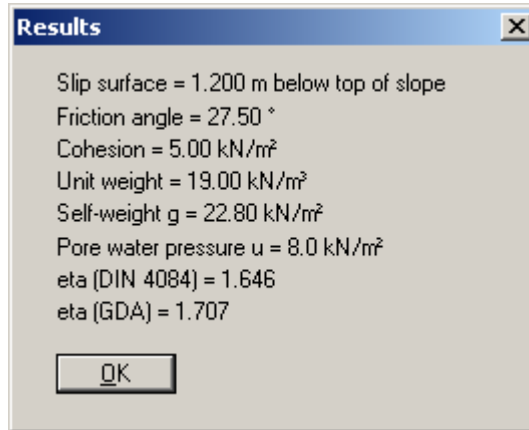


You will also be presented with the result box after closing the menu items in the "Edit" menu.

5.3.2 "Optimise" menu item


This menu item is only activated for single layer systems.

In a single layer system you are given the opportunity of having the program perform an optimisation. Select the desired parameter from the dialogue box .

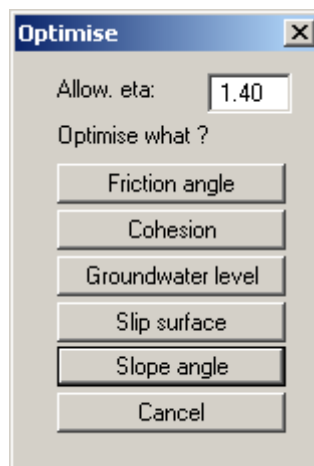


If you are using the *global safety factor concept* you can enter the allowable safety in the dialogue box. When using the *partial safety factor concept* the partial safety factor for the shear coefficients as defined in "Edit/System parameters" is displayed.

For example, if you would like to optimise the slope angle, click the appropriate button and you will see the following dialogue box:

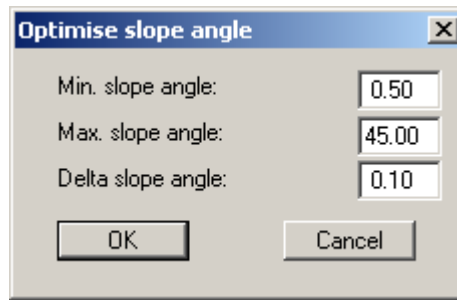


Enter the minimum, maximum and delta for the selected parameter, here the slope angle, and click "OK". The optimum value is shown in a message box, in this example the optimum slope angle for a safety factor of 1.41. You can now decide whether to adopt the optimised value in the system parameters. If you do not want to use this value click "No".

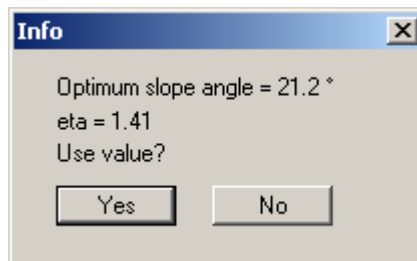


5.3.3 "Search for critical slip surface" menu item

This menu item is only activated for multi-layer systems.

In a multi-layer system it is possible to have the program search for the most unfavourable slip surface. You will see the following dialogue box for specifying search criteria.

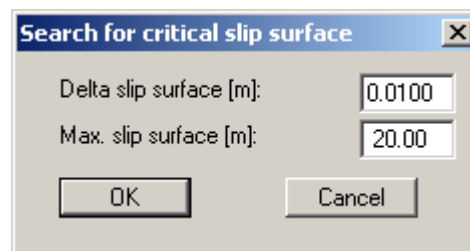


If you close this box by pressing "OK" the program performs the calculation and then displays the result of the search in a message box.

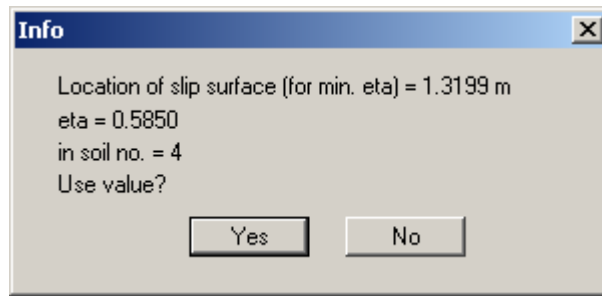

If you click "Yes" the position of the slip surface is adopted in the "System parameters" dialogue box (see Section 5.2.3.2) and drawn in the system visualisation at the identified depth.


5.3.4 "Monto-Carlo simulation" menu item

If you are not sure precisely how to achieve the parameters given in the dialogue box on-site, the Monte-Carlo simulation provides an estimate of the influence exerted by the individual parameters.

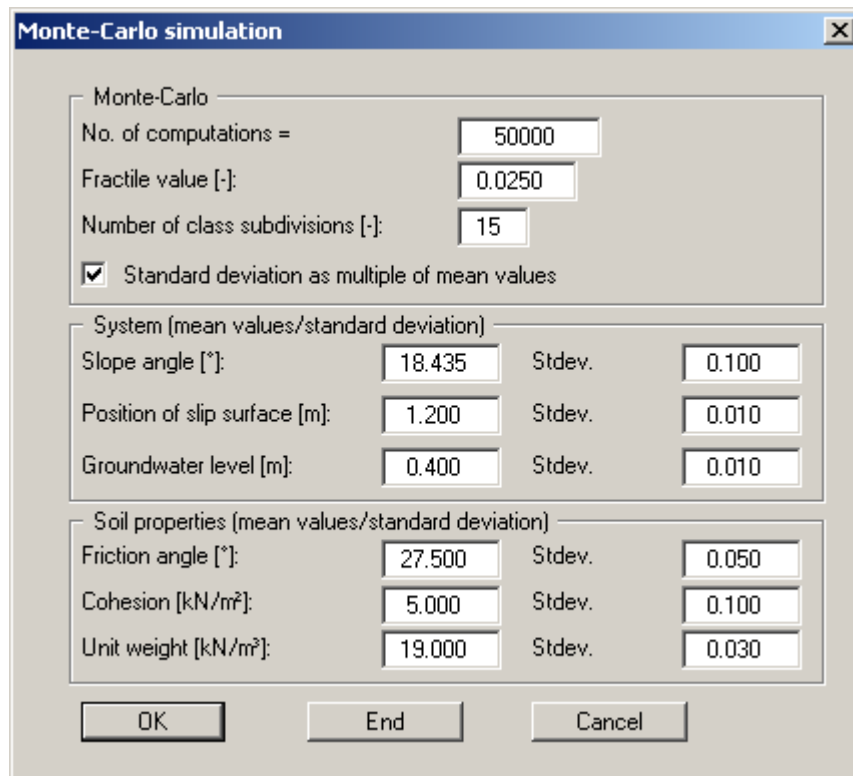

The mean and the standard deviation are given for each parameter. If the check box "Standard deviation as multiple of mean values" is activated you will be presented with a percentage standard deviation relative to the mean value of the parameter. Deactivate this check box if a fixed value is to be used in calculations.

After confirming by pressing "OK" the program performs the specified number of calculations (50,000 computations in the box above). The parameters are randomly varied within the specified limits. The result is a distribution function for eta/mu, or for the tensile force for geogrid systems. In addition, a fractile value is determined, which can be defined in the above dialogue box as a **percentage value**. For example, entering 0.025 (see above) means that 2.5% of the computed results are below the fractile value (see the following result box: eta = 1.205) and 97.5% of the computed results are above it.

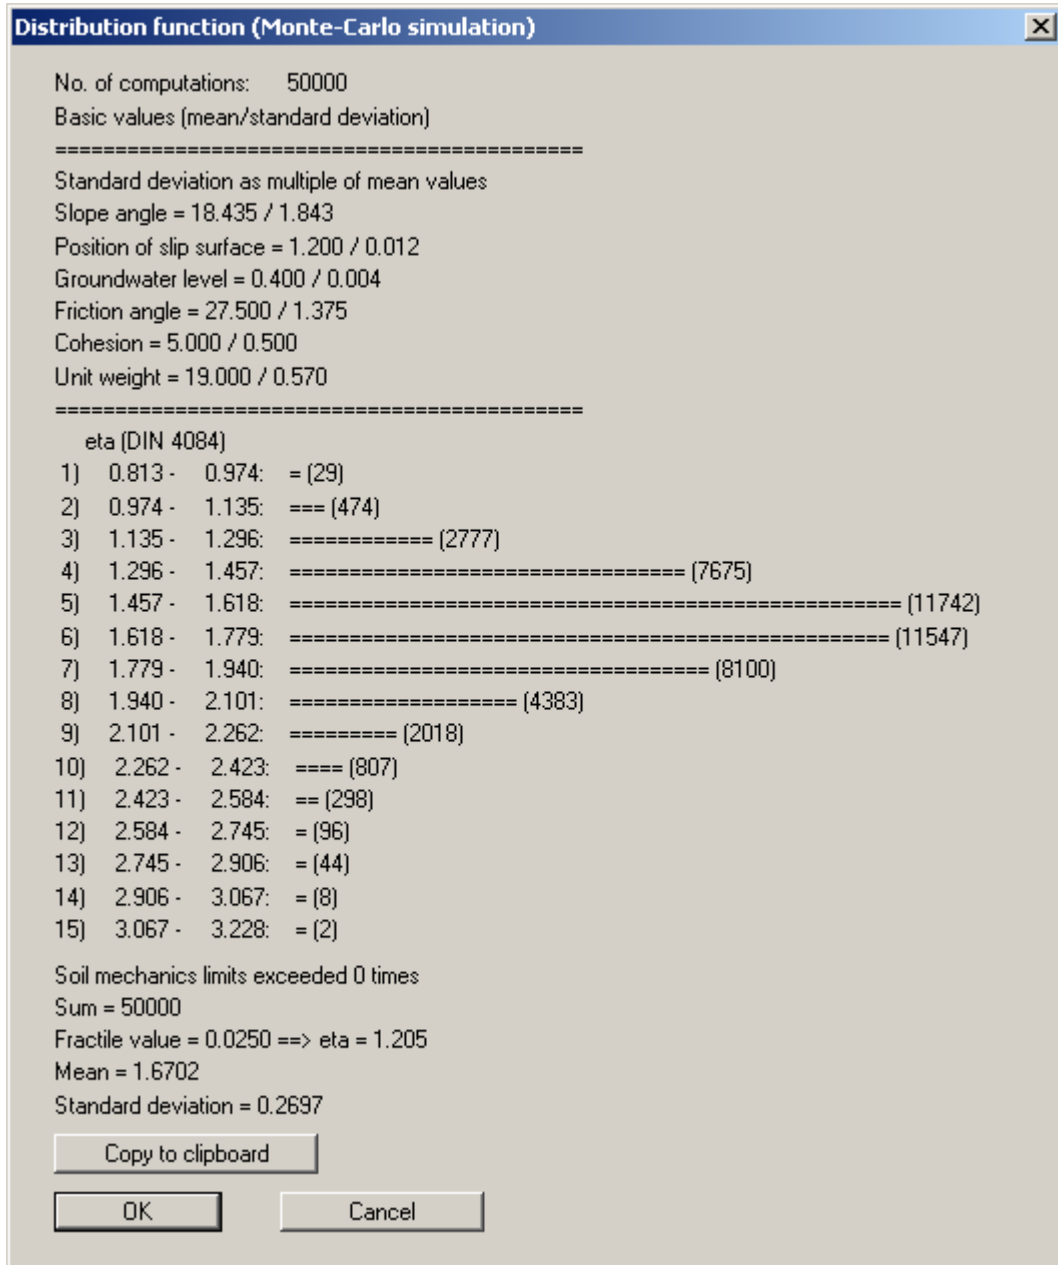


If you close the result box by pressing "OK" you will return to the input box for this menu item, where you are able to compute further variations. You can leave this menu item by pressing "End" in the input box or by pressing the "Cancel" button.

5.4 Output preferences menu

5.4.1 "File name legend" menu item

A legend with file informations will be displayed on your output sheet if you have activated the "**Show legend**" check box. Using this menu item you can alter the type of presentation.

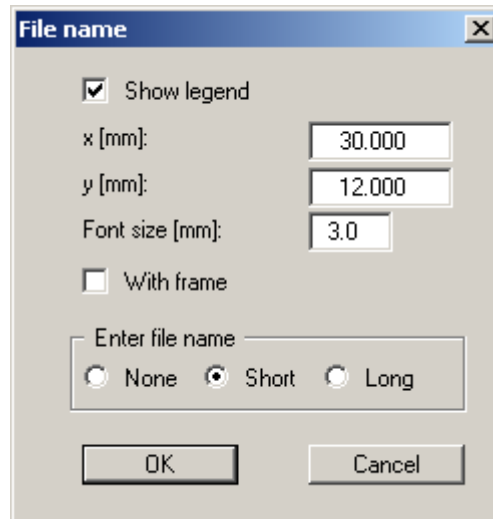


You can define and edit the position of the legend using the values "**x**" and "**y**". You control the size of the legend using "**Font size**". The fastest way to modify the position of the legend is to press the [**F11**] function key and then to pull the legend to the new position with the left mouse button pressed.

The file name can be switched off ("**None**" option button) or be displayed automatically with or without the path by selecting the appropriate "**Short**" or "**Long**" option button. Any project identification entered (see Section 5.2.1) will also be shown in this legend.

5.4.2 "System legend" menu item

You can alter the visualisation of the slope system and the analysis results represented within it by means of the following dialogue box.

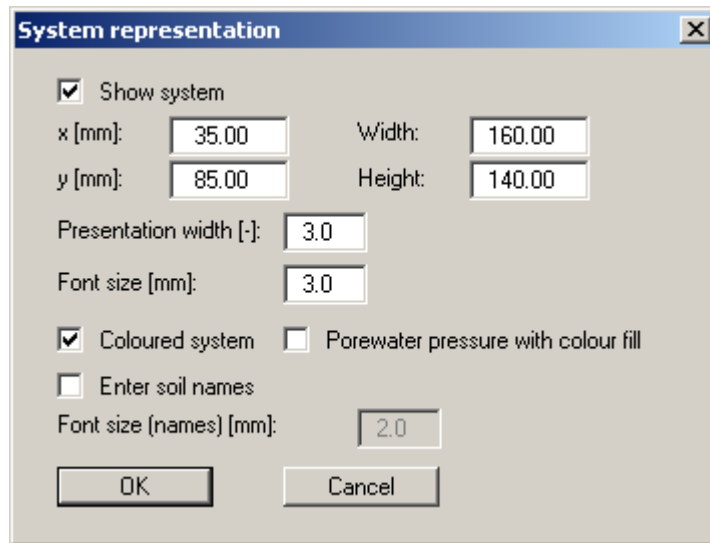


The visualisation is activated using the "**Show system**" check box and for the coordinates defined in "**x**", "**y**", "**Width**" and "**Height**". The visualisation can be varied further by way of the "**Presentation width**" factor as well as the "**Font size**". The fastest way to modify the position of the legend is to press the [F11] function key and then to pull the legend to the new position while holding the left mouse button

If the "**Coloured system**" check box is activated, the visualisation will use the soil colours defined in "**Graphics preferences/Pen colour and width**" (see Section 5.5.4) or, in multi-layer systems, in "**Output preferences/Soil properties legend**" (see Section 5.4.5). If you also activate the "**Porewater pressure with colour fill**" check box, the area between the porewater pressure line and the selected slip surface will be colour-filled. The colours can be edited in "**Graphics preferences/Pen colour and width**".

In multi-layer systems, the soils are labelled with the corresponding names if the "**Enter soil names**" check box is activated. A different font size can be used for the soil names than for the remaining labelling.

5.4.3 "Input data legend" menu item

If you activate the "**Show legend**" check box in the dialogue box for this menu item the analysis input data are displayed in a legend.

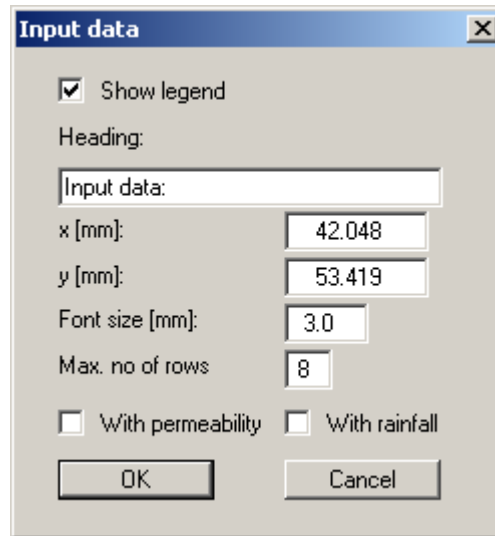


You can define and edit the position of the legend using the values "**x value**" and "**y value**". You control the size of the legend using "**Font size**" and "**Max. no. of lines**"; where necessary, several columns are used. The fastest way to modify the position of the legend is to press the **[F11]** function key and then to pull the legend to the new position with the left mouse button pressed.

Activating the two check boxes "**With permeability**" and "**With rainfall**" is only useful if you have determined the groundwater level as the ponding depth after *DRESCHER*.

5.4.4 "Results legend" menu item

If you activate the "**Show legend**" check box in the dialogue box for this menu item the safety factors are displayed in a separate box on your output sheet

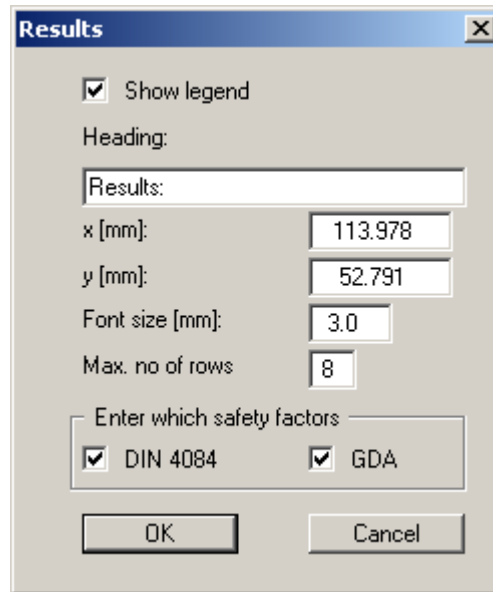


You can define and edit the position of the legend using the values "**x value**" and "**y value**". You control the size of the legend using "**Font size**" and "**Max. no. of lines**"; where necessary, several columns are used. The fastest way to modify the position of the legend is to press the [F11] function key and then to pull the legend to the new position with the left mouse button pressed.

In single layer and multi-layer systems, you can decide whether to display the safety factors or, when employing the partial safety factor concept, the utilisation factors to DIN 4084 and/or in accordance with the Recommendations of the Working Group on "*Geotechnical Aspects of Land-fill and Brownfield Sites*" (**GDA**). In a system utilising geogrids you can display the results with or without geogrid verification. If you deactivate the "**With geogrid verification**" check box, the corresponding check box in the input data legend will also be deactivated (see Section 5.4.3).

5.4.5 "Soil properties legend" menu item

A legend with the soil properties of the individual layers will be displayed on your output sheet if you have clicked the "**Show legend**" check box. Using this menu item you can alter the type of presentation or turn off the legend completely.

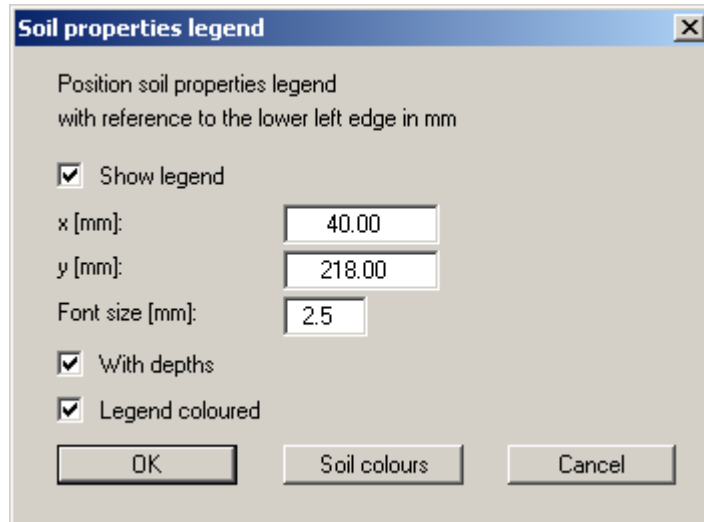


You can define and edit the position of the legend using the values "**x**" and "**y**". You control the size of the legend using "**Font size**".

The fastest way to modify the position of the legend is to press the **[F11]** function key and then to pull the legend to the new position with the left mouse button pressed.

- "**With depths**"
The depths of the individual soil layers will be shown in the soil properties legend.
- "**Legend coloured**"
The soil are displayed in the legend with the colours individually defined using the "**Soil colours**" button. If the check box is not selected,, the soil number will be adopted.
- "**Soil colours**"
You will see a dialogue box, in which you can define your preferences. After clicking the button with the desired number you can assign each soil layer a new number or reorganise using the "**Soil colours/Reorganise**" command button. You can save your colour preferences to a file with "**Soil colours/Save**" and use them for different systems by means of the "**Soil colours/Load**" command button. In the lower group box you can also transfer the colour preferences to the Windows colour management dialogue box, or vice versa, as user-defined colour preferences for example. You can read a further description by pressing the "**Info**" button.

5.4.6 "Page size and margins" menu item

The default page set-up is A4 when the program is started. You can edit the page format in the following dialogue box.

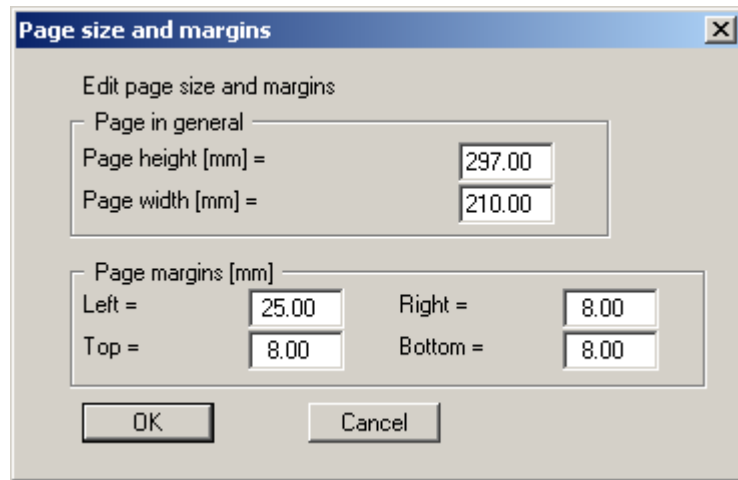

- **"Page in general"** defines the size of the output sheet. The A4 format is set as default. The program automatically draws thin cutting borders around the page, which are required when using a plotter on paper rolls. The borders can be switched off using the **"With borders"** menu item (see Section **Fehler! Verweisquelle konnte nicht gefunden werden.**).
- **"Page margin"** defines the position of a frame as a distance to the margins. This frame encloses the subsequent diagram.

In order to achieve 1:1 output on an A4 printer the borders must be switched off and the page height and page borders be adapted to the printable area of the printer.

5.4.7 "With borders" menu item

The program automatically draws thin cutting edges around the page, which are required when using a plotter on paper rolls. You can switch off the lines by deactivating this menu item.

5.4.8 "Move objects" menu item


Select this menu item in order to position legends or other graphical elements at the desired position on the output sheet. You can also move objects by pressing **[F11]** and then positioning the legend box with the left mouse button pressed. In that case an info-box appears no more.

5.5 Graphics preferences menu

5.5.1 "Refresh and zoom" menu item

The program works on the principle of *What you see is what you get*. This means that the screen presentation represents, overall, what you will see on your printer. In the last consequence, this would mean that the screen presentation would have to be refreshed after every alteration you make. For reasons of efficiency and as this can take several seconds for complex screen contents, the screen is not refreshed after every alteration.

If, e.g., after using the zoom function (see below), only part of the image is visible, you can achieve a complete view using this menu item.

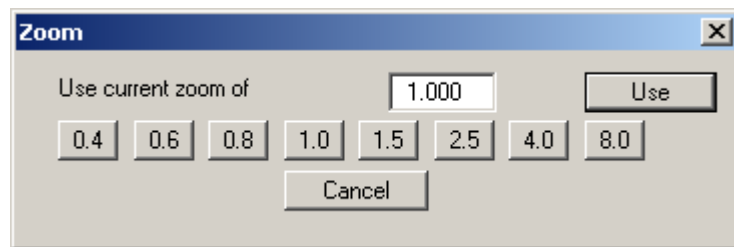

A zoom factor between 0.4 and 8.0 can be entered in the input box. By then clicking on "Use" to exit the box the current factor is accepted. By clicking on the "0.4", "0.6", etc. buttons, the selected factor is used directly and the dialogue box closed.

It is much simpler, however, to get a complete overview using [Esc]. Pressing [Esc] allows a complete screen presentation using the zoom factor specified in this menu item. The [F2] key allows screen refreshing without altering the coordinates and zoom factor.

5.5.2 "Zoom info" menu item

By clicking two diametrically opposed points you can enlarge a section of the screen in order to view details better. An information box provides information on activating the zoom function and on available options.

5.5.3 "Legend font selection" menu item

With this menu item you can switch to a different true-type font. All available true-type fonts are displayed in the dialogue box.

5.5.4 "Pen colour and width" menu item

In order to enhance the clarity of the graphics you can edit the pen settings for various graphic elements (e.g. porewater, slip surface, soils etc.). You can edit the pen widths for the elements shown in the dialogue box; by clicking on the button with the element designation you can also edit the pen or fill colours.

On *monochrome printers* (e.g. laser printers), colours are shown in a corresponding grey scale. Graphic elements employing very light colours may be difficult to see. In such cases it makes sense to edit the colour preferences.

5.5.5 "Header toolbar" menu item

Using this menu item you can add free text to the graphics and add lines, circles, polygons and images (e.g. files in formats BMP, JPG, PSP, TIF, etc.). A pop-up menu opens; the icons and functions used are described in more detail in the "**Mini-CAD**" manual provided.

Objects created with the Mini-CAD modul are based on the page format (in mm). This makes you independent of the coordinate system and keeps you in the same position on the page. You should select this menu item if you wish to place general information on the drawing (company logo, report numbers., plan numbers, stamp etc.). Once you have saved the header information to disk (see **Mini-CAD** user manual), you can load it into completely different systems (with different system coordinates). The saved header information will appear in exactly the same position on the page, which greatly simplifies the creation of general page information.

5.5.6 "Toolbar preferences" menu item

After starting the program a horizontal toolbar for the menu items appears below the program menu bar. If you would rather work with a popup window with several columns, you can specify your preferences using this menu item. The smarticons can also be switched off.

At the bottom of the program window you find a status bar with further information. You can also activate or switch off the status bar here. The preferences will be saved in the "**GGU-SLICE.alg**" file (see menu item "**Graphics preferences/Save graphics preferences**") and will be active at the next time the program is started.

By clicking on the tools (smarticons) for the menu items you can directly reach most of the program functions. The meaning of the smarticons appears as a text box if you hover with the mouse pointer over the tools. Some of the tool functions cannot be activated from the normal menu items.



"Zoom out"

If you have previously *zoomed in*, this tool returns to a full screen display.



"Zoom (-)"/"Zoom (+)"

With the zoom functions you can zoom in or out of parts of the image, by clicking the left mouse button.



"Copy/print area"

Use this tool to copy only parts of the graphics in order to paste them, e.g. to a report. You will see information on this function and can then mark an area, which is copied to the clipboard or can be saved in a file. Alternatively you can send the marked area directly to your printer.



"Colour on/off"

If you need to remove the colour from the system presentation, to create a black and white print-out, for example, use this on/off switch.

5.5.7 "Load graphics preferences" menu item

You can reload a graphics preferences file into the program, which was saved using the "**Graphics preferences/Save graphics preferences**" menu item. Only the corresponding data will be refreshed.

5.5.8 "Save graphics preferences" menu item

Some of the preferences you made with the menu items of the "**Graphics preferences**" menu can be saved to a file. If you select "**GGU-SLICE.alg**" as file name, and save the file on the same level as the program, the data will be automatically loaded the next time the program is started and need not be entered again.

5.6 ? menu

5.6.1 "Copyright" menu item

You will see a copyright message and information on the program version number.

The "**System**" button shows information on your computer configuration and the folders used by **GGU-SLICE**.

5.6.2 "Help" menu item

The **GGU-SLICE** online-help is opened using an installed browser (e.g. MS Internet Explorer). The help function can also be accessed using the [F1] function key.

5.6.3 "GGU on the web" menu item

Using this menu item you can access the GGU Software website: www.ggu-software.com. Keep in touch with new program versions and the regular *download* offers.

If you would like to be automatically notified about program innovations, please register for the Newsletter in our Knowledge Base. Go to the following website: <http://kbase.civilserve.com>.

5.6.4 "GGU support" menu item

This menu item takes to the GGU-Software [Support area](http://www.ggu-software.com/support) at www.ggu-software.com.

5.6.5 "What's new?" menu item

You will see information on program improvements in comparison to older versions.

5.6.6 "Language preferences" menu item

This menu item allows you to switch the menus and the graphics from German to English and vice versa. To work in German, deactivate the two switches "**Dialoge + Menüs übersetzen (translate dialogues, menus)**" und "**Graphiktexte übersetzen (translate graphics)**".


Alternatively, you can work bilingually, e.g. with German dialogue boxes but with graphic output in English. The program always starts with the language setting applicable when it was last ended.

6 Tips

You can scroll the screen with the keyboard using the cursor keys and the **[Page up]** and **[Page down]** keys. By clicking and pulling with the mouse, with **[Ctrl]** pressed, you activate the zoom function, i.e. the selected section will fill the screen. Furthermore you can use the mouse wheel to zoom in/out or scrolling the screen presentation. The following mouse wheel functions are available:

- Mouse wheel up = move screen image up
- Mouse wheel down = move screen image down
- **[Ctrl]** + mouse wheel up = enlarge screen image (zoom in)
- **[Ctrl]** + mouse wheel down = shrink screen image (zoom out)
- **[Shift]** + mouse wheel up = move screen image right
- **[Shift]** + mouse wheel down = move screen image left

If you click the right mouse button anywhere on the screen a context menu containing the principal menu items opens.

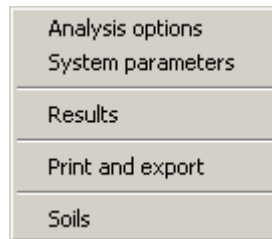

By double-clicking the left mouse button on legends or Mini-CAD objects, you will immediately move to the editor for the selected object and can then edit it.

Some of the function keys are assigned program functions. The allocations are noted after the corresponding menu items. The individual function key allocations are:

- **[Esc]** refreshes the screen contents and sets the screen back to the given format. This is useful if, for example, you have used the zoom function to display parts of the screen and would like to quickly return to a complete overview.
- **[F1]** opens the online-help.
- **[F2]** refreshes the screen without altering the current magnification.
- **[F5]** opens the menu item "**System/Results**".
- **[F6]** opens the menu item "**System/Optimise**" when using a single layer system.
- **[F6]** opens the menu item "**System/Search for critical slip surfaces**" when using a multi-layer system.
- **[F11]** activates the menu item "**Output preferences/Move objects**".

7 Worked examples

7.1 Single layer system

7.1.1 Systemdaten

Slope angle $\beta = 18.43^\circ$ (1 : 3)

$\varphi = 27.5^\circ$

$c = 5.0 \text{ kN/m}^2$

$\gamma = 19 \text{ kN/m}^3$

Position of slip surface $t_g = 1.20 \text{ m}$

GW = 0.4 m below top of slope

$u = \text{PWP} = (1.20 - 0.40) * 10.0 = 8.0 \text{ kN/m}^2$

(see provided file *ExampleSingleLayerGlobal.lam*)

7.1.2 Calculations using old standard

$$\eta(\text{DIN 4084}) = \frac{[(\gamma * t_g - u) * \tan(\varphi) + c * \cos(\beta)]}{[\cos(\beta) * \sin(\beta) * \gamma * t_g] - \tan(\beta) * \tan(\varphi)}$$
$$\eta(\text{GDA}) = \frac{[c + (\gamma * t_g - u) * \cos(\beta) * \tan(\varphi)]}{(\gamma * t_g * \sin(\beta))}$$

Req. $\eta \geq 1.40$ (LC 1)

$$\eta(\text{DIN 4084}) = \frac{[(19.0 * 1.20 - 8.0) * \tan(27.5) + 5.0 * \cos(18.43)]}{[\cos(18.43) * \sin(18.43) * 19.0 * 1.20] - \tan(18.43) * \tan(27.5)}$$
$$\eta(\text{DIN 4084}) = 1.65$$

$$\eta(\text{GDA}) = \frac{[5.0 + (19.0 * 1.20 - 8.0) * \cos(18.43) * \tan(27.5)]}{(19.0 * 1.20 * \sin(18.43))}$$
$$\eta(\text{GDA}) = 1.71$$

7.1.3 Calculations using new standard

$\gamma_\varphi = 1.25$ (LC 1)

$$1/\mu(\text{DIN 4084}) = \frac{((\gamma * t_g - u) * \tan(\varphi)/\gamma_\varphi) + c/\gamma_\varphi * \cos(\beta)}{[\cos(\beta) * \sin(\beta) * \gamma * t_g] - \tan(\beta) * \tan(\varphi)/\gamma_\varphi}$$
$$1/\mu(\text{GDA}) = \frac{[c/\gamma_\varphi + (\gamma * t_g - u) * \cos(\beta) * \tan(\varphi)/\gamma_\varphi]}{(\gamma * t_g * \sin(\beta))}$$

Req. $\mu = \text{utilisation factor} \leq 1.00$

$$1/\mu(\text{DIN 4084}) = \frac{((19.0 * 1.20 - 8.0) * \tan(27.5)/1.25) + 5.0/1.25 * \cos(18.43)}{[\cos(18.43) * \sin(18.43) * 19.0 * 1.20] - \tan(18.43) * \tan(27.5)/1.25}$$
$$1/\mu(\text{DIN 4084}) = 1.32$$
$$\mu(\text{DIN 4084}) = 0.76$$

$$1/\mu(\text{GDA}) = \frac{[5.0/1.25 + (19.0 * 1.20 - 8.0) * \cos(18.43) * \tan(27.5)/1.25]}{(19.0 * 1.20 * \sin(18.43))}$$
$$1/\mu(\text{GDA}) = 1.37$$
$$\mu(\text{GDA}) = 0.73$$

7.2 Multi-layer system

The calculations for a multi-layer system are analogous to those for the single layer system.

7.3 System with geogrid

7.3.1 System parameters

Slope angle $\beta = 18.43^\circ$ (1 : 3)

Slope length $L = 21.5$ m

$\gamma/\gamma' = 19/11$ kN/m³

Thickness $d = 1.10$ m

$\phi = 14.0^\circ$

$c = 5.0$ kN/m²

Ponding depth at toe $h_w = 0.774$ m

Short-term strength (geogrid) = 150 kN/m

$A_1 = 1.67$

$A_2 = 1.40$

$A_3 = 1.00$

$A_4 = 1.00$

Weight (installation equipment) = 110.0 kN

Weight (width) = 2.0 m

Impact factor = 1.25 (≥ 1.0)

Braking force component = 0.333

(see provided files *ExampleGeogridGlobal.lam* and *ExampleGeogridPartial.lam*)

7.3.2 Calculations using old standard

Req. $\eta = 1.30$

$\eta_{\text{Geogrid}} = 1.75$

$G = 0.774 * 0.5 * 11.0 * 21.5 + (1.1 - 0.774 * 0.5) * 19.0 * 21.5 = 382.8$ kN/m

$P = 110.0/2.0 = 55.0$ kN/m

$S = 10.0 * 0.774 * 0.5 * \sin(18.43) * 21.5 = 26.3$ kN/m

B (braking force) = $0.333 * 55.0 = 18.3$ kN/m

$T = G * \sin(\beta) + \text{impact factor} * P * \sin(\beta) + B + S$

$T = 382.8 * \sin(18.43) + 1.25 * 55.0 * \sin(18.43) + 18.3 + 26.3 =$
 $121.0 + 21.7 + 18.3 + 26.3 = 187.4$ kN/m

Passive earth pressure:

$k_{\text{pgh}} = 2.03$ (where $\phi = 27.5^\circ$ after Caquot/Kerisel)

$e_{p1} = (1.10 - 0.774) * 19.0 * 2.03 = 12.6$ kN/m²

$e_{p2} = [(1.10 - 0.774) * 19.0 + 0.774 * 11.0] * 2.03 = 29.9$ kN/m²

$E'_p = (1.10 - 0.774) * 0.5 * 12.6 + (12.6 + 29.9) * 0.5 * 0.774 = 18.5$ kN/m

$E_p = E'_p * \cos(\beta)$

$E_p = 18.5 * \cos(18.43) = 17.6$ kN/m

$R = [(G + P) * \cos(\beta) * \tan(\phi) + c * L] + E_p$

$R = [(382.8 + 55.0) * \cos(18.43) * \tan(14.0) + 5.0 * 21.5] + E_p = 228.6$ kN/m

$$\text{Req. } F = \text{req. } \eta * T - R = 1.3 * 187.4 - 228.6 \text{ kN/m}$$

$$\text{Req. } F = 243.6 - 228.6 = 15.0 \text{ kN/m}$$

$$\text{Working } F = 150.0 / (A_1 * A_2 * A_3 * A_4 * \eta_{\text{Geogrid}}) = 36.7 \text{ KN/m}$$

$$\text{Safety factor } \eta = 36.7 / 15.0 = 2.44 \text{ (verification successful)}$$

7.3.3 Calculations using new standard

$$\gamma_G = 1.35 \text{ (LC 1)}$$

$$\gamma_Q = 1.50 \text{ (LC 1)}$$

$$\gamma_{\text{Sliding}} = 1.10 \text{ (LC 1)}$$

$$\gamma_{E_p} = 1.40 \text{ (LC 1)}$$

$$\gamma_{\text{Geogrid}} = 1.40 \text{ (LC 1)}$$

$$G_k = 0.774 * 0.5 * 11.0 * 21.5 + (1.1 - 0.774 * 0.5) * 19.0 * 21.5 = 382.8 \text{ kN/m}$$

$$P_k = 110.0 / 2.0 = 55.0 \text{ kN/m}$$

$$S_k = 10.0 * 0.774 * 0.5 * \sin(18.43) * 21.5 = 26.3 \text{ kN/m}$$

$$B_k \text{ (braking force)} = 0.333 * 55.0 = 18.3 \text{ kN/m}$$

$$T_d = \gamma_G * G_k * \sin(\beta) + \gamma_Q * \text{impact factor} * P_k * \sin(\beta) + \gamma_Q * B_k + \gamma_G * S_k$$

$$T_d = 1.35 * 382.8 * \sin(18.43) + 1.50 * 1.25 * 55.0 * \sin(18.43) + 1.50 * 18.3 + 1.35 * 26.3 = 163.4 + 32.6 + 27.5 + 35.5 = 259.0 \text{ kN/m}$$

Passive earth pressure:

$$k_{pgh} = 2.03 \text{ (where } \varphi = 27.5^\circ \text{ after Caquot/Kerisel)}$$

$$e_{p1,k} = (1.10 - 0.774) * 19.0 * 2.03 = 12.6 \text{ kN/m}^2$$

$$e_{p2,k} = [(1.10 - 0.774) * 19.0 + 0.774 * 11.0] * 2.03 = 29.9 \text{ kN/m}^2$$

$$E_{p,k} = (1.10 - 0.774) * 0.5 * 12.6 + (12.6 + 29.9) * 0.5 * 0.774 = 18.5 \text{ kN/m}$$

$$E_{p,d} = E_{p,k} * \cos(\beta) / \gamma_{E_p}$$

$$E_{p,d} = 18.5 * \cos(18.43) / 1.40 = 12.5 \text{ kN/m}$$

$$R_{t,d} = 1.0 / \gamma_{\text{Sliding}} * [(G_k + P_k) * \cos(\beta) * \tan(\varphi) + c * L] + E_{p,d}$$

$$R_{t,d} = 1.0 / 1.10 * [(382.8 + 55.0) * \cos(18.43) * \tan(14.0) + 5.0 * 21.5] + E_{p,d} = 204.4 \text{ kN/m}$$

$$F_{B,d} = 259.0 - 204.4 = 54.6 \text{ kN/m}$$

$$\text{Working } F_{B,d} = 150.0 / (A_1 * A_2 * A_3 * A_4 * \gamma_{\text{Geogrid}}) = 45.8 \text{ KN/m}$$

$$\text{Utilisation factor } \mu = 54.6 / 45.8 = 1.19 \text{ (verification successful)}$$

8 Index

- A**
- Analysis results, display in legend 22
Analysis results, display in message box..... 15
- B**
- Braking force component,
geogrid installation equipment 13
- C**
- Clipboard 8
CodeMeter stick 4
Cohesion, define for geogrid 13
Cohesion, define for soil 11, 14
Colours, pens for graphical elements 25
Colours, soils 23
Colours, switch on/off 26
Company letterhead, add via Mini-CAD 26
Context menu 29
Copy/print area 8, 26
Cutting borders, switch on/off 24
- D**
- Data set description, display 19
Data set description, enter 10
Delete, soil layers 14
DIN 1054 old/new, select 6, 10
DIN 4084, show results in legend 22
Drescher 11
DXF file, export 7
DXF file, import 4
- E**
- EMF format 8
- F**
- File name, display in legend 19
File, load/save 6
Font size, input data legend 21
Font size, results legend 22
Font size, soil names 20
Font size, soil properties legend 23
Friction angle, define 11, 13, 14
Function keys 29
- G**
- GDA, display results in legend 22
General page informations, add via
Mini-CAD 26
GGUCAD file, export 8
GGUMiniCAD file, export 8
Graphics, add via Mini-CAD 26
- H**
- Groundwater, calculate as ponding depth
after Drescher 11
- I**
- Impact factor, geogrid installation equipment .. 13
Installation 4
- K**
- Knowledge Base 28
- L**
- Language preferences 5, 28
Layout, output sheet 24
Legend, move with mouse 24
Licence protection 4
- M**
- Metafile, export 8
Mini-CAD file, export 8
Mini-CAD, use of 26
Monte-Carlo simulation, start 17
Mouse wheel functions 29
- P**
- Page format, define 24
Page margins, define 24
Partial safety factors, define for
geogrid system 13
Partial safety factors, define for multi-layer
system 12
Partial safety factors, define for single layer
system 11
Pen preferences 25
Permeability, show in legend 21
Ponding depth after Drescher 11
Porewater pressure line, activate
colour-filled visualisation 20
Porewater pressure line, define colour 25
Preferences, program 27
Print, graphics 7
Print, section 8
Print, several files 9
Printer preferences 7
Program, improvements 28
Program, information 28
Program, preferences 27
Project data, add via Mini-CAD 26
Project identification, display 19
Project identification, enter 6, 10
- R**
- Rainfall event, show in legend 21
Runoff coefficient, geogrid system 13

S

Safety factor concept, change	10
Safety factor concept, select	6
Safety factors, select type of visualisation.....	22
Scroll the screen	29
Short-term strength, geogrid system.....	13
Slip surface, define position	11
Slip surface, search for most unfavourable.....	16
Smarticons, for menu items	26
Soil layers, define/delete	14
Soil names, display in system graphics	20
Soil properties, define for geogrid system	13
Soil properties, define for multi-layer system ..	14
Soil properties, define for single layer system..	11
Soil properties, display in legend	23
Soil, colours/numbers	23
Status bar main program, activate	26
System parameters, input for geogrid system ...	13
System parameters, input for multi-layer system	12
System parameters, input for single layer system	11
System, activate visualisation.....	20
System, information	28

System, optimise.....	15
System, select type	6
System, show coloured.....	20

T

Toolbar, for menu items	26
Translation	28
True-type font.....	25

U

Unit weight, define for soil.....	11, 13, 14
Utilisation factors, select type of visualisation .	22

W

What you see is what you get	25
Working Group Geotechnik der Deponien und Altlasten	4

Z

Zoom factor, define for full-screen display	25
Zoom function	25, 26, 29