

GGU-TIME-GRAPH manual

Measurement data as hydrographs & isolines

Exported on 1.9.2026

Table of contents

1 Preface

2 Licence protection

3 Language selection

4 Starting the program

5 Tips and tricks

5.1 Keyboard and mouse

5.2 Function keys

5.3 "Copy/print area" icon

6 File menu

6.1 "New" menu item

6.2 "Load" menu item

6.3 "Append" menu item

6.4 "Save" menu item

6.5 "Save as" menu item

6.6 "Import ASCII file" menu item

6.7 "Export ASCII file" menu item

6.8 "Output preferences" menu item

6.9 "Print and export" menu item

6.10 "Batch print" menu item

6.11 "Exit" menu item

6.12 "1, 2, 3, ..." menu items

7 Hydrographs menu

7.1 "Editor 1" menu item

7.1.1 Start dialog box

7.1.2 Editor box for selected measuring point

7.1.3 "Modify hydrograph" button

7.1.4 "Import ASCII file" button

7.1.5 "Statistics" button

7.1.6 "Special" button

7.1.7 "Monthly values" button

7.1.8 "Edit measured data" button

7.2 "Editor 2" menu item

7.3 "Time axis" menu item

7.4 "Measured data axis etc." menu item

7.5 "Select hydrographs" menu item

7.6 "Display hydrographs" menu item

7.7 "Swap hydrographs" menu item

8 Contours menu

8.1 "Display" menu item

8.1.1 Select date for contours visualisation

8.1.2 "Display contours" button

8.1.3 Select type of contours

8.1.4 "Presentation format (contours)" button

8.1.5 "Display gradients" button

8.1.6 "Presentation format (gradients)" button

8.1.7 "Coloured contours" button

8.1.8 "3D contours" button

8.1.9 "3D contours (array)" button

8.2 "Automatic triangle mesh" menu item

8.3 "Manually" menu item

8.4 "Round off" menu item

8.5 "Test" menu item

8.6 "Display" menu item

8.7 "Delete" menu item

8.8 "Save" menu item

8.9 "Load" menu item

8.10 "Test coordinates" menu item

8.11 "Edit coordinates" menu item

8.12 "Labelling x and y axes" menu item

9 Section menu

9.1 General notes on sections

9.2 "Define" menu item

9.2.1 Define section course

9.2.2 Select date for section visualisation

9.3 "Preferences" menu item

9.4 "Pens (section)" menu item

10 Graphics preferences menu

- 10.1 "Refresh and zoom" menu item
- 10.2 "Zoom info" menu item
- 10.3 "Pen colour and width" menu item
- 10.4 "Legend font selection" menu item
- 10.5 "Toolbar preferences" menu item
- 10.6 "3D toolbar" menu item
- 10.7 "General legend" menu item
- 10.8 "Hydrographs legend" menu item
- 10.9 "Section course legend" menu item
- 10.10 "Date legend" menu item
- 10.11 "Move objects" menu item
- 10.12 "Load graphics preferences" menu item
- 10.13 "Save graphics preferences" menu item

11 Page size + margins menu

- 11.1 "Page size and margins" menu item
- 11.2 "Auto-resize" menu item
- 11.3 "Auto-resize measured data axis" menu item
- 11.4 "Manual resize (editor)" menu item
- 11.5 "Manual resize (mouse)" menu item

12 Info menu

- 12.1 "Copyright" menu item
- 12.2 "Maxima" menu item
- 12.3 "Help" menu item
- 12.4 "GGU on the web" menu item
- 12.5 "GGU support" menu item
- 12.6 "Meteorology + pedology" menu item
- 12.7 "What's new?" menu item
- 12.8 "Language preferences" menu item



Theorie. Und Praxis.

Geotechnische Softwarelösungen können so einfach sein. Denn Theorie und Praxis lassen sich mit **GGU-Software** und den neuen Angeboten der **civilserve Academy** prima kombinieren: Knackige theoretische Aufgaben lösen und als Sahnehäubchen Ihr

**Know-how durch
Praxisseminare
vertiefen!**

Civilserve GmbH
Exklusivvertrieb GGU-Software
Weuert 5 · D-49439 Steinfeld
Tel. +49(0)5492 6099996
info@ggu-software.com

Infos und Termine zu unseren Präsenz- und
Online-Seminaren jetzt unter

www.ggu-software.com

1 GGU-TIME-GRAPH: Preface

The GGU-TIME-GRAPH program allows management, evaluation and graphical visualisation of **measured data in the form of hydrographs and contour lines**. The time component is at the forefront of these considerations. For example, we can represent long-term (years) gauge measurements as hydrographs and perform statistical evaluations for the measurement duration.

If the x- and y-coordinates of the data points are known, the measured data for any given point in time can be visualised as position-oriented graphics. You can select from the following graphical formats for your data:

- Hydrographs
- Contour lines
- Colour-filled contour lines
- Colour-filled 3D graphics

Using **GGU-TIME-GRAPH**, each data point can be allocated up to 50,000 value pairs in the form of a date, a time and a corresponding value (e.g. groundwater level).

The program includes convenient data input. The system is permanently displayed on the screen. Every change to the data is displayed on the screen, so that optimum control of the input data is guaranteed.

There are "?" and "Info" buttons in the dialog boxes for many technical and program-specific questions. Click on the "?" buttons or "Info" buttons to obtain the necessary information.

The graphic output supports the true type fonts provided by WINDOWS, so that an excellent layout is guaranteed. Colour output and numerous graphic formats (BMP, TIF, JPG etc.) are supported. PDF and DXF files can also be imported via the integrated **Mini-CAD** system (see "Mini-CAD" manual).

The program has been extensively tested. No errors have been found. Nevertheless, liability for completeness and correctness of the program and the manual, and for any damage resulting from incompleteness or incorrectness, cannot be accepted.

2 GGU-TIME-GRAPH: Licence protection

To protect the GGU software from unauthorised access, each GGU program is equipped with the **CodeMeter software protection system** from WIBU-Systems. Each GGU program is bound to a so-called **CmContainer** via a licence with the corresponding product code.

To be able to use the GGU licences in a CmContainer, a runtime environment, the **CodeMeter Runtime Kit**, must be installed on your computer via driver software. You can obtain the current version from [Software for Users - Wibu-Systems](#) (CodeMeter User Runtime for Windows).

You can work with the following CmContainer types on your PC with the CodeMeter Runtime Kit installed (= **CodeMeter licence server**):

- **CmStick**
The licence for your GGU program is stored in a USB dongle.
- **CmActLicense** (soft licence, not for virtual PC/servers)
The licence for your GGU program is stored in a licence file that is linked to the hardware of a computer.
- **CmCloudContainer**
The licence is located on a CmCloud server of WIBU-Systems and is mirrored to your CodeMeter licence server. The advantages of this type of licence binding are described on the following website: [Licence binding | GGU Software](#).

The GGU programs check at start-up and during runtime whether a corresponding license is available in a CmContainer.

3 GGU-TIME-GRAPH: Language selection

The GGU programs can be used in German and English. The program always starts with the language in which it was terminated.

The language preferences can be changed at any time in the "**Info**" menu, using the menu item "**Spracheinstellung**" (for German) or "**Language preferences**" (for English).

4 GGU-TIME-GRAPH: Starting the program

After starting the program, you will see two menus at the top of the window:

- File
- Info

After going to the "File" menu, you can either load an existing file by means of the "Load" menu item, or create a new one using "New". Seven menus then appear at the top of the window:

- File
- Hydrographs
- Contours
- Section
- Graphics preferences
- Page size + margins
- Info

After clicking one of these menus, the so-called menu items roll down, allowing you access to all program functions.

The program works on the principle of ***What you see is what you get***. This means that the screen presentation represents, overall, what you will see on your printer. In the last consequence, this would mean that the screen presentation would have to be refreshed after every alteration you make. For reasons of efficiency and as this can take several seconds for complex screen contents, the screen is not refreshed after every alteration.

If you would like to refresh the screen contents, press either [F2] or [Esc]. The [Esc] key also resets the screen display to your current image zoom, which is usually preset to 1.0, which corresponds to an A3 or A4 sheet in most GGU programs (see menu item "**Graphics preferences/Refresh and zoom**").

5 Tips and tricks

5.1 GGU-TIME-GRAPH: Keyboard and mouse

Slow screen output generated using the contour line menu items can be cancelled by clicking the right mouse button.

You can scroll the screen with the keyboard using the cursor keys and the **[Page up]** and **[Page down]** keys. By clicking and pulling with the mouse, with **[Ctrl]** pressed, you activate the zoom function, i.e. the selected section will fill the screen. Use the mouse wheel to zoom in or out of the screen view or to pan.

In addition, scale and coordinates of the system graphics (drawing area within the plotting margins) can be altered directly using the mouse wheel. The following mouse wheel functions are available


Change system graphics (new values can be checked in "Page size + margins/Manual resize (editor)"):

- **[Ctrl]** + mouse wheel up = enlarge system graphics (change of scale)
- **[Ctrl]** + mouse wheel down = shrink system graphics (change of scale)
- **[Shift]** + mouse wheel up = move system graphics up
(change in system coordinates)
- **[Shift]** + mouse wheel down = move system graphics down
(change in system coordinates)
- **[Shift]** + **[Ctrl]** + mouse wheel up = move system graphics right
(change in system coordinates)
- **[Shift]** + **[Ctrl]** + mouse wheel down = move system graphics left
(change in system coordinates)

Change screen coordinates:

- Mouse wheel up = move screen image up
- Mouse wheel down = move screen image down
- **[Alt]** + **[Ctrl]** + mouse wheel up = enlarge screen image (zoom in)
- **[Alt]** + **[Ctrl]** + mouse wheel down = shrink screen image (zoom out)
- **[Alt]** + **[Shift]** + mouse wheel up = move screen image right
- **[Alt]** + **[Shift]** + mouse wheel down = move screen image left

If you click the right mouse button anywhere on the screen a context menu containing the principal menu items opens.

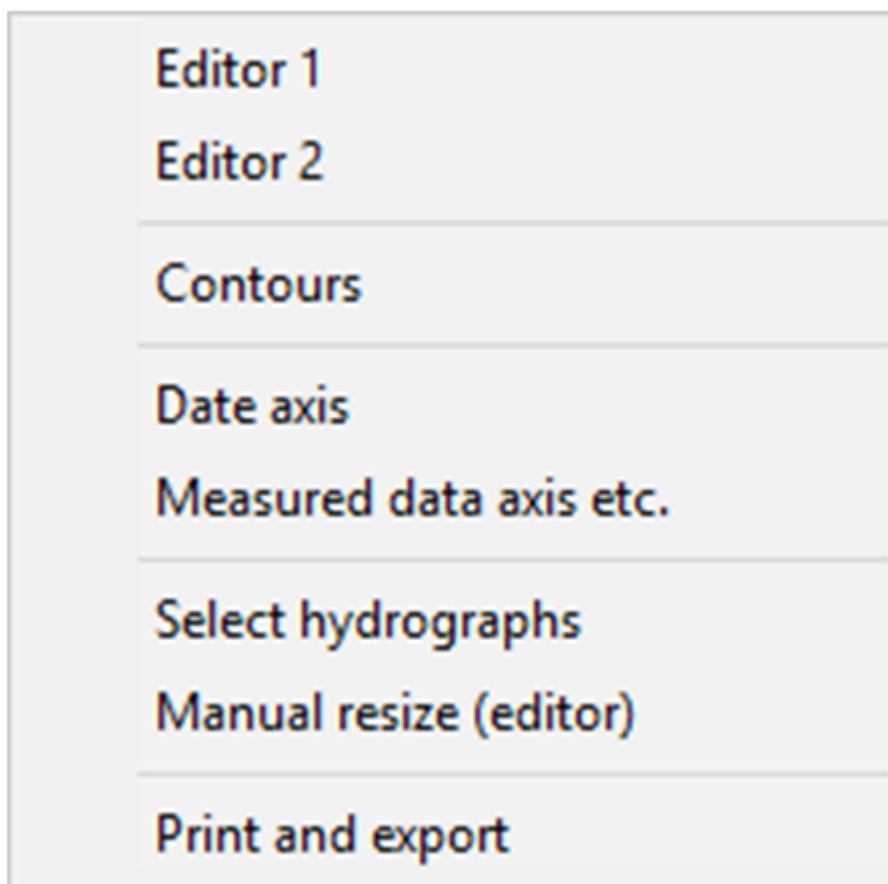

By double-clicking the left mouse button on legends or **Mini-CAD** objects, the editor for the selected object immediately opens, allowing it to be edited.

5.2 GGU-TIME-GRAPH: Function keys

Some of the function keys are assigned program functions. The allocations are noted after the corresponding menu items. The individual function key allocations are:

- **[Esc]** refreshes the screen content and resets the screen section to your current image zoom, which is preset to 1.0. This is useful, for example, if you have used the magnifying glass function to display sections of the drawing on the screen and want to quickly return to the overall view.
- **[F1]** opens the manual file.
- **[F2]** refreshes the screen without altering the current magnification.
- **[F11]** activates the menu item "**Move objects**", which appears in the GGU programs under various menu titles, e.g. "**Page size + margins**", "**Graphics preferences**" or "**Output preferences**".

In this GGU program, the following function keys are also assigned to program functions:

- **[F3]** opens the menu item "**Graphics preferences/Zoom info**".
- **[F7]** activates the menu item "**Page size + margins/Auto-resize time axis**".

- [F8] activates the menu item "**Page size + margins/Auto-resize measured data axis**".
- [F9] activates the menu item "**Page size + margins/Auto-resize**".

5.3 GGU-TIME-GRAPH: "Copy/print area" icon

A dialog box opens when the "**Copy/print area**" icon




in the menu toolbar is clicked, describing the options available for this function. For example, using this icon it is possible to either copy areas of the screen graphics and paste them into the report, or send them directly to a printer.

In the dialog box, first select where the copied area should be transferred to: "**Clipboard**", "**File**" or "**Printer**". The cursor is displayed as a cross after leaving the dialog box and, keeping the left mouse button pressed, the required area may be enclosed. If the marked area does not suit your requirements, abort the subsequent boxes and restart the function by clicking the icon again.

If "**Clipboard**" was selected, move to the MS Word document (for example) after marking the area and paste the copied graphics using "*Edit/Paste*".

If "**File**" was selected, the following dialog box appears after defining the area, shown here as an example for the **GGU-FOOTING** program:

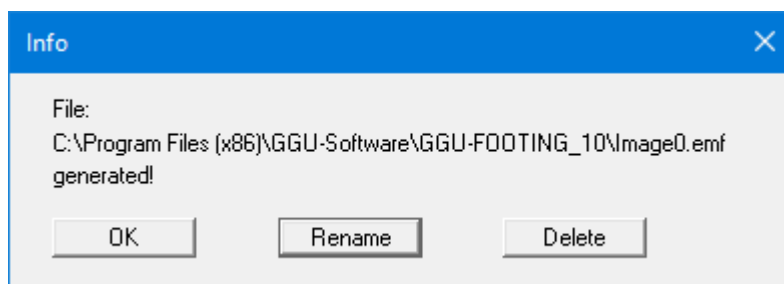

The default location of the file is the folder from which the program is started (here: GGU-FOOTING_10) and, if several files are created, the file is given the file name "**Image0.emf**" with sequential numbering. If the

"**Rename**" button in the dialog box is clicked, a file selector box opens, and the copied area can be saved under a different name in a user-defined folder. Saving can be aborted by pressing the "**Delete**" button.

If the "**Printer**" button was pressed in the first dialog box, a dialog box for defining the printer settings opens after marking the area. Following this, a dialog box for defining the image output settings opens. After confirming the settings, the defined area is output to the selected printer.

6 File menu

6.1 GGU-TIME-GRAPH: "New" menu item

All current measured data will be deleted. You can then enter new data points and the corresponding data.

6.2 GGU-TIME-GRAPH: "Load" menu item

You can load a file with system data, which was created and saved at a previous sitting, and then edit the system.

6.3 GGU-TIME-GRAPH: "Append" menu item

Using this menu item, you can append an existing file to the file already open. The data points and corresponding values contained in the added file will be appended to the current file. In this way, it is possible to merge files.

However, note that the settings for the page format, image coordinates and header data are taken from the last appended file.

6.4 GGU-TIME-GRAPH: "Save" menu item

You can save data entered or edited during program use to a file, to have them available later, or to archive them. The data is saved without prompting with the name of the current file. The file contains all system information. Loading again later creates the same visualisation as was present at the time of saving.

6.5 GGU-TIME-GRAPH: "Save as" menu item

You can save data entered during program use to an existing file or to a new file, i.e. using a new file name. For reasons of clarity, it makes sense to use ".gis" as file suffix, as this is the suffix used in the file requester box for the **"File/Load"** or **"File/Append"** menu items. If you choose not to enter an extension when saving, ".gis" will be used automatically.

6.6 GGU-TIME-GRAPH: "Import ASCII file" menu item

If the coordinates of the data points and the corresponding data are available as an ASCII file, this data can be read into the program. You can either read the data as **"new"** values (the current data will be deleted) or append it to the current data. Decimal fractions must have a point and not a comma.

After selecting the ASCII file, you will see the following dialog box:

Import ASCII file

File: C:\GGU-Software\GGU-TIME-GRAPH.TXT

Row 1 of 308 rows

"Bo 1";23.10.1992;96.610001;33900

Column delimiter:

☐ Space ☐ Tab ☒ Semicolon ☐ Comma

Info

Data:

Name column: 1 Bo 1

Date column: 2 23.10.92

Value column: 3 96.610001

Import first valid row No. of valid rows

Coordinates

☐ Import coordinates

Easting 4

Northing 5

Import data Cancel

The current line of the ASCII file is shown at the top. You can move through the file using the arrow buttons on the right. In the **"Name column:"**, **"Date column"** and **"Value column:"** you enter the column number in which the respective data is located. Using the **"Import coordinates"** check box it is possible to enable import of eastings and northings. If all the information is correct, the results for the current row are shown in the corresponding dialog boxes. Otherwise, **"Error"** appears.

You may need to change the column delimiter.

If the file contains invalid as well as valid rows of data, these will simply be skipped during import. After the **"Import data"** button has been pressed and the data successfully imported, you will see a message box with the number of imported values and character strings. You can now process the data further or move on to evaluation.

The program decides on the allocation of data based on the name of the data point. For example, if data has already been entered before the ASCII data were imported and valid rows with existing data point names occur in the ASCII data, the data are allocated to this data point, i.e. appended to the existing record.

If you import eastings and northings and inadvertently have different ASCII data in a number of rows but for the same data point, the last valid value will be imported.

In the ASCII file the data for a given data point need not be in sequential rows. The time for all imported values is set to "0:00".

If you want to import ASCII data for a single point only, please read Section "Import ASCII file" button.

6.7 GGU-TIME-GRAPH: "Export ASCII file" menu item

This menu item allows you to save the current data in ASCII format. The data exported in this way can be read and further processed in other applications, e.g. in spreadsheets. A 'space' is used as delimiter.


6.8 GGU-TIME-GRAPH: "Output preferences" menu item

You can edit output preferences (e.g. swap between portrait and landscape) or change the printer in accordance with WINDOWS conventions.

6.9 GGU-TIME-GRAPH: "Print and export" menu item

You can select your output format in a dialog box. You have the following possibilities:

- **"Printer"**
allows graphic output of the current screen contents (**graphical representation**) to the WINDOWS standard printer or to any other printer selected using the menu item **"File/Output preferences"**. But you may also select a different printer in the following dialog box by pressing the **"Output prefs./change printer"** button.

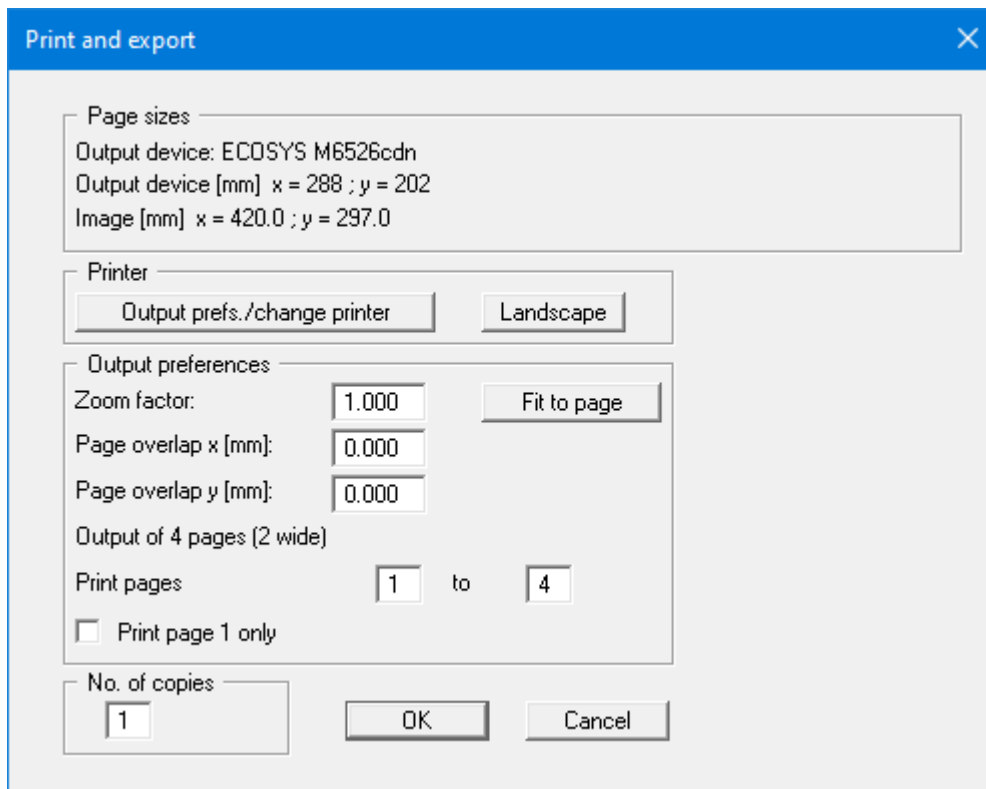

In the upper group box, the maximum dimensions which the printer can accept are given. Below this, the dimensions of the image to be printed are given. If the image is larger than the output format of the printer, the image will be printed to several pages (in the above example, 4). To facilitate better re-connection of the images, the possibility of entering an overlap for each page, in x and y direction, is given.

Alternatively, you also have the possibility of selecting a smaller zoom factor, ensuring output to one page ("**Fit to page**" button). Following this, you can enlarge to the original format on a copying machine, to ensure true scaling. You can also print only the 1st page with zoom factor = 1.0, in which case the bottom left-hand area is printed. Furthermore, you may enter the number of copies to be printed.

- **"DXF file"**
allows output of the graphics to a DXF file. DXF is a common file format for transferring graphics between a variety of applications.
- **"GGU-CAD file"**
allows output of the graphics to a file, in order to enable further processing with the **GGU-CAD** program. Compared to output as a DXF file this has the advantage that no loss of colour quality occurs during export.
- **"Clipboard"**
The graphics are copied to the WINDOWS clipboard. From there, they can be imported into other WINDOWS programs for further processing, e.g. into a word processor. In order to import into any other WINDOWS program, you must generally use the "*Edit/Paste*" function of the respective application.
- **"Metafile"**
allows output of the graphics to a file in order to be further processed with third party software. Output is in the standardised EMF format (Enhanced Metafile format). Use of the Metafile format guarantees the best possible quality when transferring graphics.

If you select the **"Copy/print area"** tool




from the toolbar, you can copy parts of the graphics to the clipboard or save them to an EMF file. Alternatively you can send the marked area directly to your printer (see **"Tips and tricks"**).

Using the **"Mini-CAD"** program module you can also import EMF files generated using other GGU applications into your graphics (see menu item **"Graphics preferences/Mini-CAD"**).

- **"Mini-CAD"**

allows export of the graphics to a file to enable importing to different GGU applications with the **Mini-CAD** module.

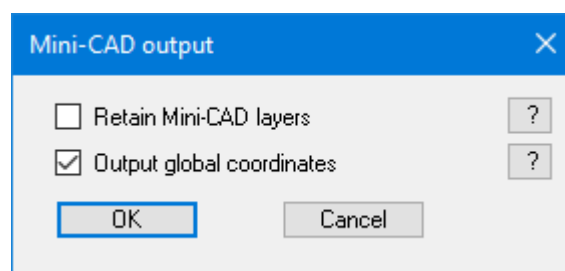

If the **"Retain Mini-CAD layers"** check box is activated, the layer allocations for any existing **Mini-CAD** elements are saved. Otherwise, all **Mini-CAD** elements are saved on Layer 1 and are also inserted into Layer 1 in other GGU programs via the **"Load"** function in the **Mini-CAD** pop-up menu.


By activating the **"Output global coordinates"** check box, the present graphics are saved in the system coordinates [m]. Otherwise, they are saved in the page coordinates [mm]. If you import the **Mini-CAD** file saved using **"Global coordinates"** into a different GGU program, the coordinates are also transferred. After importing the file and pressing the [F9] function key (menu item **"Page size + margins/Auto-resize"**) the system coordinates and the scale are corrected according to the transferred world coordinates. -

"GGUMiniCAD"

allows export of the graphics to a file in order to enable processing in the GGUMiniCAD program. - **"Cancel"** Printing is cancelled.

6.10 GGU-TIME-GRAPH: "Batch print" menu item

If you would like to print several appendices at once, select this menu item. You will see the following dialog box:

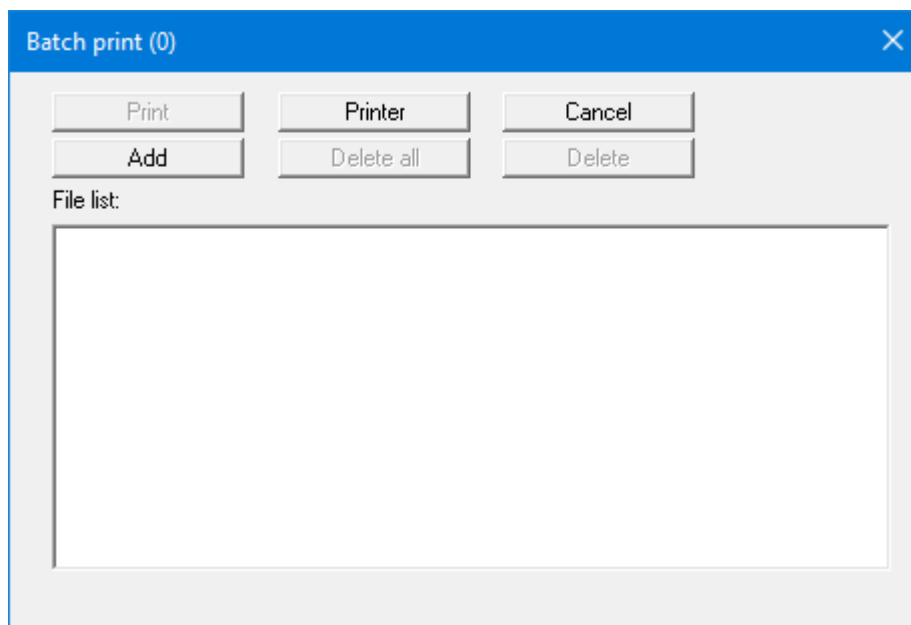

Create a list of files for printing using **"Add"** and selecting the desired files. The number of files is displayed in the dialog box header. Using **"Delete"** you can mark and delete selected individual files from the list. After selecting the **"Delete all"** button, you can compile a new list. Selection of the desired printer and printer preferences is achieved by pressing the **"Printer"** button.

You then start printing by using the **"Print"** button. In the dialog box which then appears you can select further preferences for printer output such as, e.g., the number of copies. These preferences will be applied to all files in the list.

6.11 GGU-TIME-GRAPH: "Exit" menu item

After a confirmation prompt, you can quit the program.

6.12 GGU-TIME-GRAPH: "1, 2, 3, ..." menu items

If you have not stored a working directory for the program icon, the program jumps to the program directory after starting to load or save a file.

Under the menu items of the File menu, the most recently edited files are listed with the respective storage path ("**1, 2, 3, ...**"). Selecting one of these files loads the selected file. The next time the **"File/Load"** or **"File/Save"** menu items are called up in the same program session, the program automatically jumps to the directory of the last file loaded.

7 Hydrographs menu

7.1 "Editor 1" menu item

7.1.1 GGU-TIME-GRAPH: Start dialog box

All information associated with an individual data point can be entered using this menu item. If you go to this menu item you will first see the following dialog box:



Seven data points (wells) are already present in this example. The data point designation is given on the respective buttons ("Bo 1", "Bo 2", ...). The following operations are possible:

- **"Menu bar"**
You return to the original menu bar.
- **"New"**
A new data point is created. You can now enter the data for a new point.
- **"Delete all"**
After a confirmation prompt all existing data points are deleted.
- **"Forw." and "Back"**
If more than 105 data points have been entered, the points following 105 can be accessed by clicking these buttons.
- **"Bo 1", "Bo 2", ...**
By clicking the buttons labelled with data point names you can edit the data for the corresponding data point.

7.1.2 GGU-TIME-GRAPH: Editor box for selected measuring point

After clicking **"New"** or one of the buttons of an existing data point the following dialog box opens.



At the top of this dialog box you can enter the name of the data point and edit the x- and y-ordinates. If you would like to display this data point later in a second diagram in the hydrograph visualisation, activate the **"Display on 2nd data axis"** check box.

By clicking the **"Done"** button you return to the previous dialog box; any changes will be accepted. Using the **"Cancel"** button you leave the dialog box and any editing is rejected.

If the measured values you are dealing with are groundwater levels, you can activate the **"Values as depth-to-water"** check box. In the activated **"TOC:"** box (top of casing) you enter the m AD height for the top of the casing of the well. When subsequently entering the measured values you can simply give the water level on the water level sounding light in metres. The program converts the groundwater levels automatically to [m AD] for hydrograph visualisation and displays them.

The values entered remain unchanged. Only the hydrograph visualisation on the screen (or printed) is adjusted accordingly.

Preferences for visualisation of the hydrograph of the current data point, such as colour, width and type of dash, are defined in the bottom group box (**"Pen"**).

In addition to the buttons described in more detail in sections **"Edit measured data"** button to **"Monthly values"** button, the following operations can be carried out here:

- **"Delete hydrograph"**

The currently displayed data point can be deleted. If a triangle mesh has been generated to enable contour line display based on the existing data points, it will also be deleted.

- **"Duplicate hydrograph"**

The currently displayed data point can be copied. All current data will be copied. You will then find yourself in the box for the duplicated data point, titled **"New"**.

- **"Edit measured data"**

A description of this button can be found in Section **"Edit measured data"** button.

- **"Delete measured data"**

You can decide in a dialog box whether to delete all or every 2nd measured value for this data point.

- **"Modify hydrograph"**

A description of this button can be found in Section **"Modify hydrograph"** button.

- **"Import MDS data"**

Measured data collected using a data acquisition system (e.g. MDS cells) can be imported as **".dst"** files and be further processed by the program.

- **"Load measured data"**

You can load measured data from a **GGU-TIME-GRAPH** data file (**".gng"** extension). If you select **"New"**, the current data are deleted. In order to add data to the current record, select **"Append"**.

- **"Save measured data"**

The measured data for the current point are saved in a special data format with the **".gng"** extension.

- **"Import ASCII file"**

A description of this button can be found in Section **"Import ASCII file"** button.

- **"Export to ASCII file"**

The measured values can be saved as an ASCII file with the **".txt"** extension and then edited, for example with a text editor.

- **"Import ASCII (WSV)"**

Measured data provided in ASCII format by <http://www.pegelonline.wsv.de/> can be imported into the program and processed.

- **"Evapotranspiration (Haude)"**

You can have the evapotranspiration calculated after Haude. You must either enter one hydrograph with the temperature data and one with the humidity data or import an appropriate ASCII file.

You must generate a new hydrograph for the evapotranspiration values. Allocate the hydrographs to the appropriate drop-down list boxes to calculate the values. The evapotranspiration values are calculated from the temperature and humidity values and transferred to your hydrograph as new values.

- **"Statistics"**

A description of this button can be found in Section "Statistics" button

- **"Special"**

A description of this button can be found in Section "Special" button.

- **"Import SEBA file"**

Measured data saved in ASCII format by SEBA automatic recording instruments can be imported into the program and processed.

- **"Monthly values"**

A description of this button can be found in Section "Monthly values" button.

- **"Import DWD CDC file"**

Measurement data from DWD, saved as a CSV file via the <https://cdc.dwd.de/portal/> portal, can be imported into the program and processed.

7.1.3 GGU-TIME-GRAPH: "Modify hydrograph" button

You can edit all data for the current point using a constant. For example, assume that all groundwater levels were given with an error of one metre; by adding a **"Constant 1.00"** all measured data can be corrected.



The four basic mathematical operations can be used. Additionally, the modifications can be limited to certain measured data ranges by activating the **"Modify measured data from Date (1) to Date (2)"** check box.

7.1.4 GGU-TIME-GRAPH: "Import ASCII file" button

If measured data have been previously processed (in a text editor, for example) they can be imported after clicking the button. Here, too, it is possible to open new data or to append to the existing record using the **"Append"** button.



The current line of the ASCII file is shown at the top. You can move through the file using the arrow buttons on the right. Enter the column number in which the respective data is located in the "**Date column**" and "**Value column**". The "**With time**" check box allows the time to also be imported. Otherwise a time of 00.00 is allocated.

If all the information is correct, the result for the row is shown at the bottom right of the dialog box. Otherwise, "**Error**" appears. You may need to change the column delimiter. If the file contains invalid as well as valid rows, these will simply be skipped during import.

After the "**Import data**" button has been pressed and the data successfully imported, you will see a message box with the number of values and character strings read. You can now process the data further or move on to evaluation.

7.1.5 GGU-TIME-GRAPH: "Statistics" button

A dialog box for statistical evaluation of the stored values at this point opens. The statistical evaluation is carried out for the data range specified for the time axis of the hydrograph visualisation (see menu item "**Page size + margins/Manual resize (editor)**"). If only a portion is visualised, only this portion will be taken into consideration in the statistics. In this case, however, a warning is issued beforehand, allowing the complete data range to be used in the evaluation.

A statistical evaluation is all the more meaningful the more measured data is available.

It is therefore always more expedient to work with the complete data range.

The "**Example_02_statistics.gis**" example file was used in the following dialog boxes.

Minimum and maximum values, variance and standard deviation, as well as extreme events and probabilities, can be calculated for a given number of months or years by means of a further dialog box.




You can determine the mean of all measured data using the "Normalise to mean value" button. To do this, first duplicate your hydrograph in the data point editor and then determine the mean. The mean is now defined as zero, allowing you to visually recognise temporal deviations from the mean.


You can determine the mean of all measured data using the "**Normalise to mean value**" button. To do this, first duplicate your hydrograph in the data point editor and then determine the mean. The mean is now defined as zero, allowing you to visually recognise temporal deviations from the mean.

Using the "**Arith. mean DWA 138**" button, you can view a summary of the highest annual groundwater levels compliant with the analysis in DWA-A 138. You can transfer this data, for example to a text, via the Windows clipboard.

If you select the "**Month(extreme)**" button in the "**Extreme events**" line in the dialog box above, you must first enter the recurrence interval to be calculated.

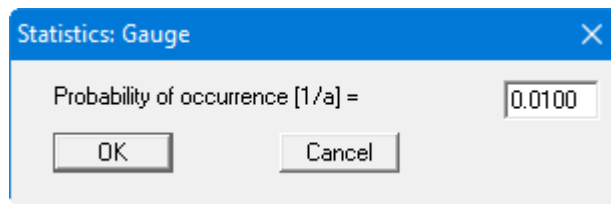

The number shown in the box above, for instance, means a recurrence interval of **"once in 100 years"**. The values are then calculated and displayed.

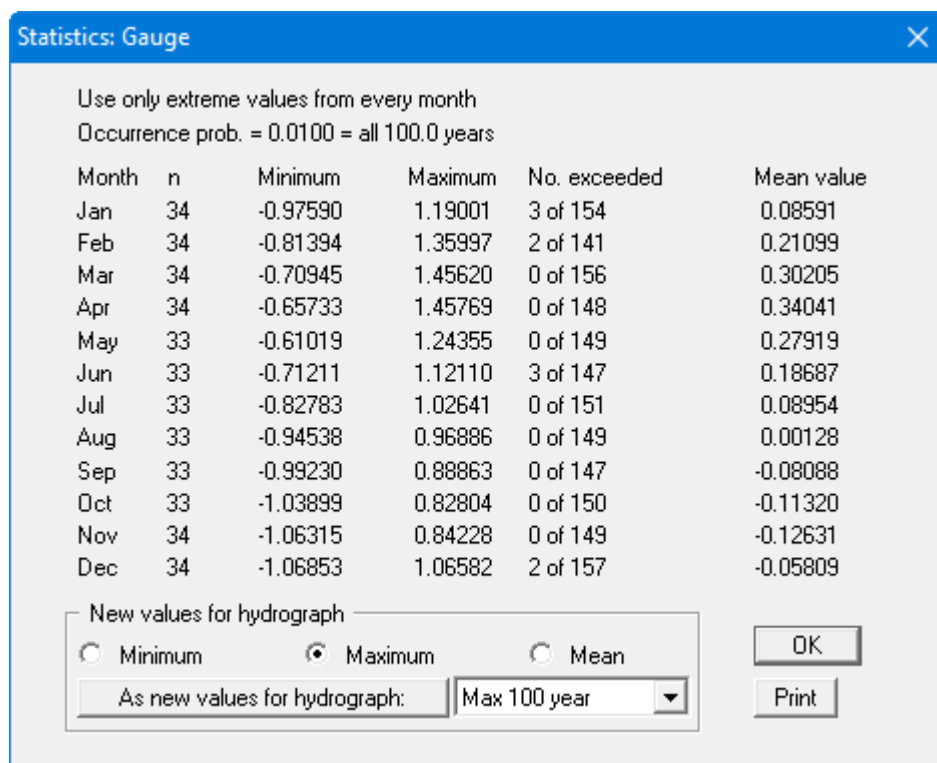

The **"Print"** button facilitates data output to a printer or, alternatively, to a file. The date values are then positioned at the 15th of each month. They are printed again for the whole period every time you press the print button.

The results for **"Minimum"**, **"Maximum"** or **"Mean"** can be allocated directly to a hydrograph via the **"As new value for hydrograph:"** button; the hydrograph can be specified in the drop-down list box beside the button.

For direct allocation a hydrograph must be previously defined (e.g. using **"Hydrographs/Editor 1"** button **"New"**), because only existing hydrographs are listed in the drop-down list box.

The hydrographs for **"Mean"**, **"Max 100 year"** and **"Min 100 year"** in the **"Example_02_statistics.gis"** file were calculated from the gauge hydrograph in this manner.

7.1.6 GGU-TIME-GRAPH: "Special" button

You see a command box that allows you to perform a whole range of further analyses with the current data.



The operations are started directly after data input without further confirmation.

These operations directly affect your measured data!

Before you work with them you should always duplicate your hydrograph; this allows you to keep a hydrograph containing the original data.

7.1.7 GGU-TIME-GRAPH: "Monthly values" button


If long-term data series' (several years) are available and new measured data is regularly accrued, selected statistical evaluations can be performed more quickly or updated using this button: The following dialog box appears, for example



Select the evaluations to be performed by activating the appropriate **"Use"** check boxes. Enter a description of the evaluation in the text boxes, which at the same time will be the name of the respective new hydrograph. If the evaluation needs to be updated, for example because the measured data has been supplemented, activate the **"Delete existing hydrographs with same name"** check box. The newly generated evaluation can then be saved again as a hydrograph with the same name.

7.1.8 GGU-TIME-GRAPH: "Edit measured data" button

In the following dialog box you can either enter or edit the data for the current point.



- **"Edit no. of values"**

In the example shown here 44 measured data have already been entered. By pressing the button you can edit the number of measured data in a further dialog box.

If no values have been entered (new data point), the box will contain a **"0"**. Measured data can be added by increasing the number, and values at the end of the list deleted by decreasing the number of values.

In order to delete measured data within an existing list, remove the corresponding date and then click the "Sort" button.

- **"Import clipboard"**

It is even easier to import measured data via the Windows clipboard. For example, if the measured data are available as value pairs in an Excel table, it is possible to copy the two date and measured data columns into the clipboard (*"Edit/Copy"*) and then to paste them into the dialog box shown above by pressing **"Import clipboard"**.

- **"OK"/"Cancel"**

You return to the previous dialog box. All changes made to the data will be accepted with **"OK"** and rejected with **"Cancel"**.

- **"Sort"/"Info on sorting"**

Intermediate values can be inserted or deleted from the list using the sort function. You can read more detailed information on the sort function by clicking the **"Info on sorting"** button.

- **"Time"**

You can define a new time for all measured values.

- **"Info on date input"**

A number of short-cuts are available to avoid complete date input for every day when entering new data. Information on abbreviated date input can be read by pressing this button.

- **"Delete measured data"**

A dialog box opens allowing measured data or data ranges to be deleted by defining a start and end date or a start and end time.

7.2 GGU-TIME-GRAPH: "Editor 2" menu item

If existing data needs to be edited for several data points, it is often a chore to open each point individually. Using this menu item you can enter a common date and time in a dialog box, either new for all hydrographs, or by way of editing old values.



A numerical value need not be entered for every data point. If one of the data input boxes is left empty, a new value will not be generated for this hydrograph. If the date and time coincide with an existing value the old one will be replaced.

7.3 GGU-TIME-GRAPH: "Time axis" menu item

You can influence the appearance of the time axis in the graphical visualisation. When the program starts, the display is defined with date shown. The following dialog box opens:




The various preferences can be selected after activation of the check boxes **"Show days"**, **"Show month names"** and **"Show years"**. The date can be rotated by 90° using the **"Show complete date"** check box. You can also enter and position your own labelling for the time axis in the lower group box.

Labelling is foregone if there is not enough room for your chosen visualisation.

For example, if you have selected **"Show days"** and **"Label every 1st day"** (every day), the space available is generally insufficient. It is then better to label at every 7th day.

If you want to display only a period without the date displayed, first click the "Time axis without date" button at the top of the dialog box. The following adapted dialog box opens:

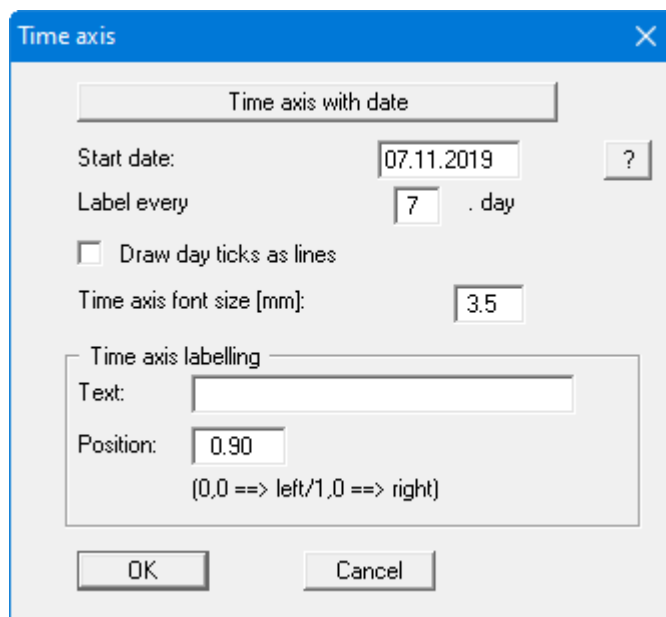

In the upper input box, you can specify a start date that is defined as "0" on the time axis. The days are counted from here.

The range displayed on the time axis (start date and end date) is defined via the menu item "**Page size + margins/Manual resize (editor)**".

To return to a time axis with date display, click on the "**Time axis with date**" button in the above dialog box. This takes you to the dialog box described on the previous page.

7.4 GGU-TIME-GRAPH: "Measured data axis etc." menu item

Using this menu item you can define the format of the hydrographs visualisation for the user-defined data points in a dialog box.



In the "**Measured data axis**" group box you can define horizontal reference lines, measured data axis font size, markers preferences, etc. It is also possible to define a logarithmic measured data axis or to visualise the hydrographs as a bar chart, e.g. to visualise precipitation data. The measured data axis can also be labelled in this menu item's dialog box.

The second measured data axis will only be used if the check box "**Display on 2nd measured data axis**" in the editor of at least one of your data points is activated.

7.5 GGU-TIME-GRAPH: "Select hydrographs" menu item

The data points for the hydrograph visualisation can be selected in the following dialog box.



The complete range of measuring points to be activated using the "**All**" button and deactivated using the "**None**" button. Individual measuring points can be switched on or off by clicking the respective check boxes. If individual measuring points are activated, as shown in the dialog box, and a second hydrograph visualisation is needed to display the previously unmarked measuring points, click the "**Reverse**" button.

If there are a large amount of data points you can navigate through the list using the "**Forw.**" and "**Back**" buttons.

7.6 GGU-TIME-GRAPH: "Display hydrographs" menu item

This menu item activates the hydrograph visualisation on the screen.

7.7 GGU-TIME-GRAPH: "Swap hydrographs" menu item

The hydrographs are displayed in the same sequence that the data points were entered. In the **Hydrograph legend**, the data points are listed in this sequence with the corresponding markers. If you would like to achieve a different sequence in the visualisation, and thus in the legend, swap the corresponding data points using this menu item until the required sequence is displayed.

8 Contours menu

8.1 "Display" menu item

8.1.1 GGU-TIME-GRAPH: Select date for contours visualisation

Using this menu item the measured data can be visualised as contour lines. After completing new input and before using this menu item, a triangle mesh (interpolation mesh) must be defined (see the following Sections). The program utilises this triangle mesh as the basis for interpolation between the individual data points.

After going to the "**Contours/Display**" menu item you have to select the date for the measured data visualisation.

Specify date for contours

Days for which a value is available for every measuring point: 23.10.1992

Selected date: 23.10.1992

If the selected date does not occur at all measuring points, linear interpolation is performed. To prevent unusually large interpolation ranges, a boundary value may be specified in days. If this boundary value is exceeded a warning message is given. If the boundary value specified = 0 interpolation is performed without warning.

Boundary = max. difference between 2 measuring dates [days]: 0

OK Cancel

In the so-called "**Combo box**" (top right) all dates can be selected for which data is available at all wells. After selecting a date using the combo box it is displayed in the "**Selected date:**" input box. Alternatively, you can enter a date by hand in the "**Selected date:**" input box. If data is not available at all wells for this date the missing values will be determined by linear interpolation. Further details are explained by the text in the dialog box.

The hydrograph visualisation also allows a time of day to be taken into consideration. Only daily values can be taken into consideration for the visualisation using contour lines.

If, when editing the hydrograph, several measured data are available for a given date, the mean of all data is used for the contour line visualisation.

8.1.2 GGU-TIME-GRAPH: "Display contours" button

The measured data can be displayed as lines of equal value, e.g. groundwater isohypses. A dialog box opens allowing you to define preferences for contour line visualisation.



The program shows the existing smallest and largest values and the separation of the contour lines. If you want the visualisation to begin with a different value, the initial value can be entered here. You can also vary the spacing, in order to reduce the number of contour lines drawn for example.

If you select the **"Contours"** button in the previous dialog box, the settings displayed here are always those automatically selected by the program. Using the **"Old values"** button, the preferences used for the previous contour line diagram are adopted. This information is saved with the record.

You can also select from three smoothing out procedures:

- **"Do not smooth"**

As a linear method is implemented within the triangle elements, this will provide analysis results without smoothing performed by the program.

- **"Method 1"** and **"Method 2"**

these smoothing out procedures employ two different Bezier splines. Smoothing out intensities can be given for both in order to acquire smooth contour lines. **Method 2** creates very **"round"** contours, with the danger that the true results may be falsified.

There is no optimum method.

Method suitability depends on the type of data.

You can specify the type of visualisation for the contour lines by means of the **"Dash preferences"** and **"Further preferences"** buttons. These settings can also be adjusted in advance by means of the **"Presentation format (contours)"** button.

If the preferences are confirmed by pressing **"OK"** the contours are displayed on the screen. The colour defined in **"Graphics preferences/Pen colour + width"** is used. If the contours need to be visualised in a different colour, the colour can be adapted to suit your requirements here.

8.1.3 GGU-TIME-GRAPH: Select type of contours

After selecting the required date the following dialog box opens allowing the type of contour visualisation to be specified, preferences for visualisation in general or the data to be output for other applications.



In addition to the buttons described in more detail in Sections "Display contours" button - "3D contours (array)" button, the following operations can be carried out here:

- **"Contours and gradients"**

Allows combined presentation of contours and gradients. The settings for contour line representation are described in Section "Presentation format (contours)" button. The description of gradient representation can be found in Section "Presentation format (gradients)" button.

- **"Edit font sizes"**

You define the font sizes for axes labelling, etc.

- **"Calculate area and volume"**

The program computes the area and volume resulting from the data measured within the defined triangle mesh. If data smaller than zero is present, negative volume will also be computed. If the appropriate measured data are entered (e.g. ground level, thickness of topsoil, location of the excavation level) excavation volumes can also be computed.

- **"Export to ASCII file"**

You can generate an ASCII file with the current data, which can subsequently be processed further, for example in a spreadsheet. The coordinates of the triangle mesh and the corresponding measured values are exported.

- **"Export to GGU-GEO-GRAPH file"**

You can generate an **GGU-GEO-GRAPH** file to facilitate exporting the measured data to the **GGU-GEO-GRAPH** application in order to process them further.

- **"Cancel"**

You exit the **"Contours/Display"** menu item.

8.1.4 GGU-TIME-GRAPH: "Presentation format (contours)" button

In the dialog box you can specify preferences for the type of presentation and for contour line labelling.



- **"Frame triangle mesh"**


A thin line is drawn around the outer edge of the mesh.

- **"Show triangle mesh"**
All triangles in the mesh are drawn.
- **"Show data points"**
The points and corresponding point names are displayed.
- **"Show measured data"**
The measured data at the corresponding points are displayed.
- **"Label contours"**
The contours are labelled, the text is positioned approximately in the centre of the contour lines.
- **"Label contours twice"**
The contours are labelled at both ends.
- **"Heading"**
You can enter a text here to be displayed in the **General legend**.
- **"Date in heading"**
If you activate this check box the selected date for the contour line visualisation is automatically inserted after the heading text in the **General legend**.


If nothing has been defined as a heading and the **"Date in heading"** check box is deactivated, the **General legend** will only be displayed if one of the file name display check boxes in the dialog box is activated.

In addition, the number of decimal places and the font size can be defined for contour labelling, as well as the font sizes for the measuring point labelling.

The **"Dash preferences"** button opens the following dialog box

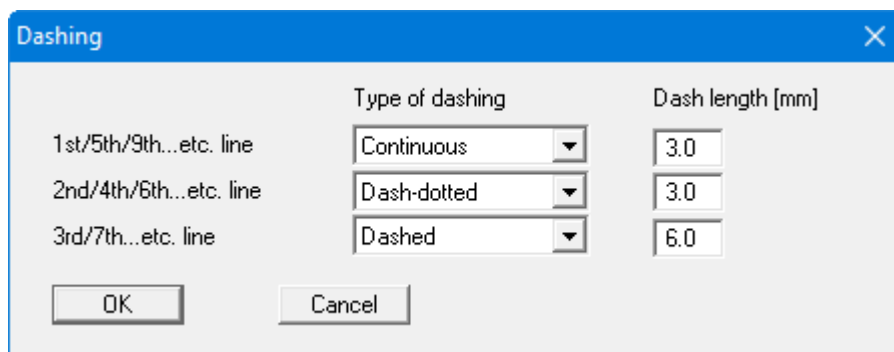

For example, if you want to display groundwater diagrams depicting large areas, the contour labelling may be very widely spaced. The settings in the above dialog box would lead to the following contour lines for a selected contour spacing of 0.25 m.

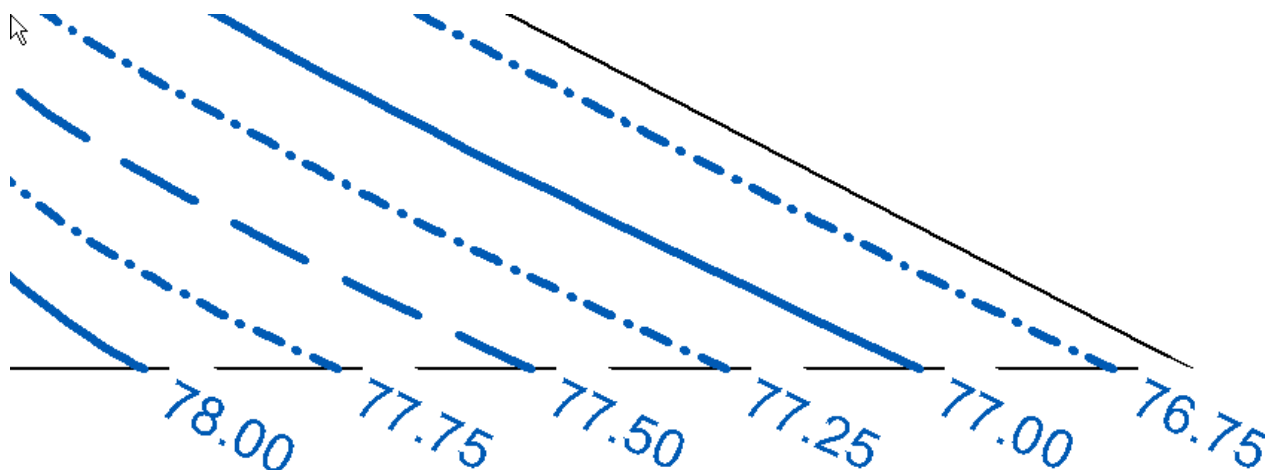

8.1.5 GGU-TIME-GRAPH: "Display gradients" button

Using this button you can generate a gradient field. The gradients are computed from the three values, one at each corner, for each triangle respectively. The length of the gradients can be controlled in the dialog box.



Further gradient presentation format and labelling preferences can be specified by means of the **"Presentation format (gradients)"** button in the above dialog box (see the following Section).

8.1.6 GGU-TIME-GRAPH: "Presentation format (gradients)" button

In the dialog box you can specify preferences for the type of presentation and for gradient labelling.



- **"Frame triangle mesh"**
A thin line is drawn around the outer edge of the mesh.
- **"Show triangle mesh"**
All triangles in the mesh are drawn.
- **"Show data points"**
The points and corresponding point names are displayed.
- **"Show measured data"**
The measured data at the corresponding points are displayed.
- **"Label gradients"**
The gradients are labelled with the gradient value.

- **"Rotate text by 90 degrees"**

Depending on the orientation of the gradient arrows, the labelling may be above the arrows. It may be useful for clear visualisation to rotate the labelling by 90°.

- **"Fill arrows"**

The gradient arrowheads are colour-filled with the colour given for gradients in the **"Graphics preferences/Pen colour and width"** menu item. If a different colour is required it must be specified here.

- **"Heading"**

You can enter a text here to be displayed in the **General legend**.

- **"Date in heading"**

If you activate this check box the selected date for the gradient visualisation is automatically inserted after the heading text in the **General legend**.

If nothing has been defined as a heading and the **"Date in heading"** check box is deactivated, the **General legend** will only be displayed if one of the file name display check boxes in the dialog box is activated.

In addition, the number of decimal places and the font size can be defined for contour labelling, as well as the font sizes for the measuring point labelling.

8.1.7 GGU-TIME-GRAPH: "Coloured contours" button

Using this button contour lines can be drawn with a colour fill.



- **"Contour data"** group box

The **"Determine extreme values ..."** button computes the minimum and maximum values and enters them into the appropriate input boxes. However, you need not retain these values, but can also define your own. If, based on the example shown in the dialog box above, you set the minimum value to 94.50 and the maximum value to 106.00, you will get a colour change every 50 cm using 24 colours.

No smoothing of the contour lines can be performed here.

- **"Colour fill"** group box

Using **"No. of colours"** you can control the colour subdivisions of the contour line diagram. In the example above, 16 colours will be displayed between **"Colour 1"** and **"Colour 2"**. The default setting uses a colour course from red to blue. These colours can be edited as wished after selecting the **"Colour 1"** and **"Colour 2"** buttons, or simply reverse the choice by selecting **"Change colour series"**.

- **"Further preferences"** group box

In addition to the colour presentation you can also have the triangle mesh and/or the outline displayed. Additional contour lines can also be drawn. Line labelling preferences can be defined by means of the **"Labelling preferences"** button.

- **"OK"**

The colours will be drawn after confirmation.

A colour bar at the right edge of the sheet allows correlation between the colour and the corresponding value. If this colour bar is drawn in the right page margin, specify a larger value for the right plotting margin (e.g. 25 mm) in the **"Page size + margins/Page size and margins"** menu item.


8.1.8 GGU-TIME-GRAPH: "3D contours" button

Using this button contours are visualised as a three dimensional image.



First, select the point of observation (position of the "eye" in x, y and z coordinates), the type of projection and the zero level of the 3D presentation. The values are displayed above and below the zero level (z ordinate) in three dimensions. The program will generally make sensible suggestions for the input values in the dialog box, so you will not normally need to make alterations.

After leaving the dialog box by pressing **"OK"** you will see the following dialog box. It greatly resembles the box shown in the **"Contours/Display"** menu item **"Coloured contours"** button .

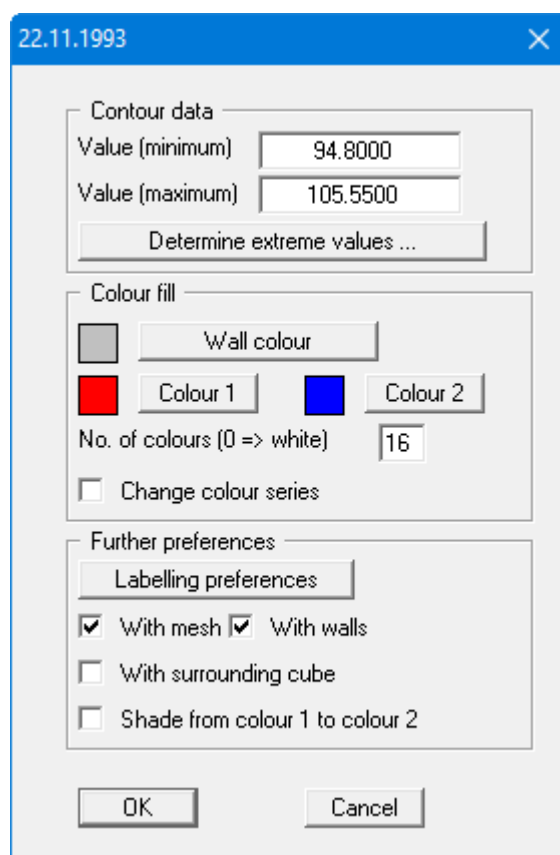

You can also specify whether an enclosing cube should be displayed; in some cases this improves the 3D effect. The **"Shade from colour 1 to colour 2"** check box represents a bit of a special effect. If this check box is activated a light source is simulated in the region of the eye. The angle between the light beam and the respective 3D surface represents a measure of the reflection. The area is shaded in accordance with colours 1 and 2. A good choice of colours, for example, would be dark grey for colour 1 and pale grey for colour 2.

If the triangle mesh is very irregular in plan, the 3D impression will probably not be optimum. You should then use the **"3D in rectangle array"** button.

8.1.9 GGU-TIME-GRAPH: "3D contours (array)" button

The 3D effect is usually lost in an irregular triangle mesh. The contours are then presented as a three dimensional image in a rectangular array. The following dialog box opens where you can define the array by selecting the number of x and y subdivisions (plates):




The program interpolates the values to be represented at the array points from the underlying triangle mesh. After leaving the dialog box by pressing **"OK"** you will at first see the same boxes for defining the eye etc. and the coloured contours preferences as that described in the **"Contours/Display"** menu item **"3D contours"** button.

8.2 GGU-TIME-GRAPH: "Automatic triangle mesh" menu item

In order to visualise contour lines the program first requires a triangle mesh (interpolation mesh), which serves as the basis for contour line smoothing. This mesh need only be defined once and is then saved with the dataset. This menu items allows you to have the mesh generated automatically by the program.

8.3 GGU-TIME-GRAPH: "Manually" menu item

Generally, the automatically generated triangle mesh is very high quality. However, there are cases in which you might want to generate a different interpolation between individual points. Using this menu item, you can create a triangle mesh completely by hand or rework an existing mesh. A message box provides information on the procedure:

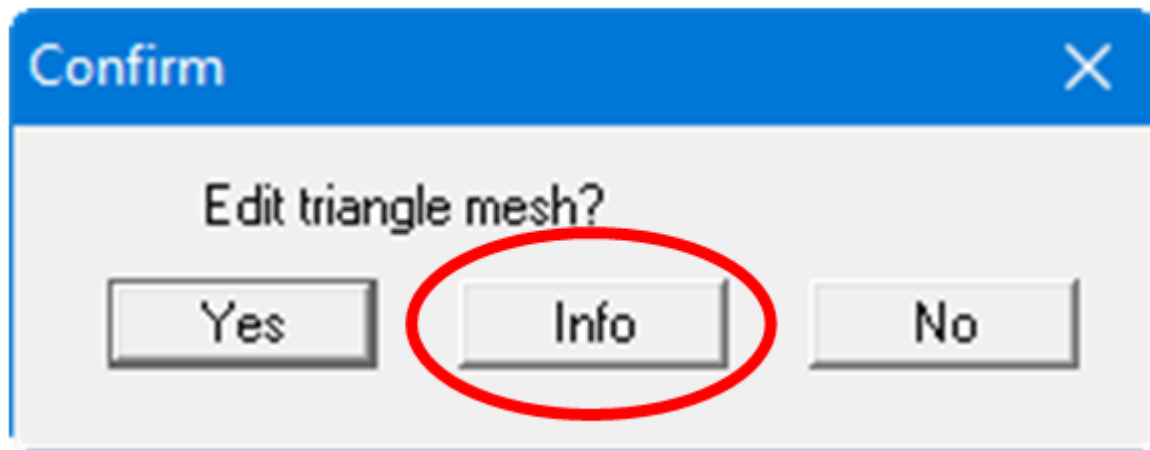

To define a triangle mesh (interpolation mesh) the data points are first displayed in their correct locations.

If no points are visible, got to the "**Page size + margins/Auto-resize**" menu item or use the [F9] function key.

Then click three data points with the left mouse button; these then represent an interpolation triangle. Repeat this process until all the required data points are integrated into the triangle mesh. By pressing the right mouse button you can reset a triangle.

The triangles may not overlap as this will almost always lead to nonsensical contours. You can have this condition tested by the program by going to the "**Contours/Test**" menu item.

If you want to delete an existing triangle, click the points of the triangle once more. By pressing the right mouse button you can reset a triangle.


8.4 GGU-TIME-GRAPH: "Round off" menu item

During automatic generation a triangle mesh is generated that envelops all points. This can lead to acute-angled triangle elements in the boundary regions. These triangles can be removed from the triangle mesh using this menu item.

The program first computes the maximum and average radius ratios of the most unfavourable triangle. The radius ratio describes the relationship between external radius and internal radius of a triangle. For an isosceles triangle, this ratio equals 2.0 (optimum).



A dialog box then opens, allowing you to define a radius ratio, above which all triangles are deleted.

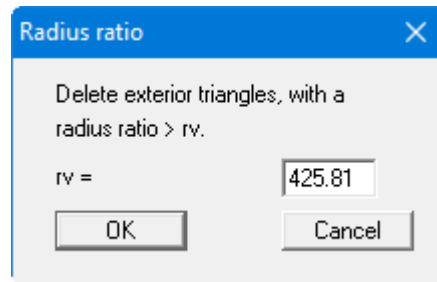

In the example above, all external triangles with a radius ratio greater than 425.81 will be removed.

In order to avoid **interpolation holes** in the triangle system only triangles at the boundaries are deleted.

8.5 GGU-TIME-GRAPH: "Test" menu item

The program examines the existing triangle mesh for overlapping triangles, which would normally lead to undesirable results.

8.6 GGU-TIME-GRAPH: "Display" menu item

You can have the triangle mesh (interpolation mesh) presented by means of the following dialog box.



Using the "**Select presentation format**" button you have the option of specifying a number of preferences for the presentation, e.g. labelling with point names or triangle numbers.

8.7 GGU-TIME-GRAPH: "Delete" menu item

Using this menu item you can delete the triangle mesh, in part or completely. You must first click four points in anti-clockwise direction. All triangles with their centroid within this quadrilateral will be deleted.

8.8 GGU-TIME-GRAPH: "Save" menu item

You can save the triangle mesh separate from the dataset, in order to use varying interpolation meshes for the same system, for example.

8.9 GGU-TIME-GRAPH: "Load" menu item

You can load a previously saved triangle mesh (interpolation mesh).


8.10 GGU-TIME-GRAPH: "Test coordinates" menu item

If you work with eastings and northings a lot of digits are **lost** numerically, because the coordinate values only differ in the final four digits before the point.



It may then be expedient, and in extreme cases unavoidable, to work with a so-called offset. For example, you can subtract 3,550,000 m from all eastings between 3,555,000 m and 3,556,000 m and then work in the range from 5,000 m to 6000 m. You can make this offset visible in the graphics by correspondingly labelling the x and the y axis (see menu item "**Contours/Labelling x and y axes**").

If the coordinates are too large, the above dialog box opens, for example. The "**Edit coordinates**" button opens the same box as used in the menu item "**Contours/Edit coordinates**". However, the program enters the recommended offset values directly into the appropriate input boxes.

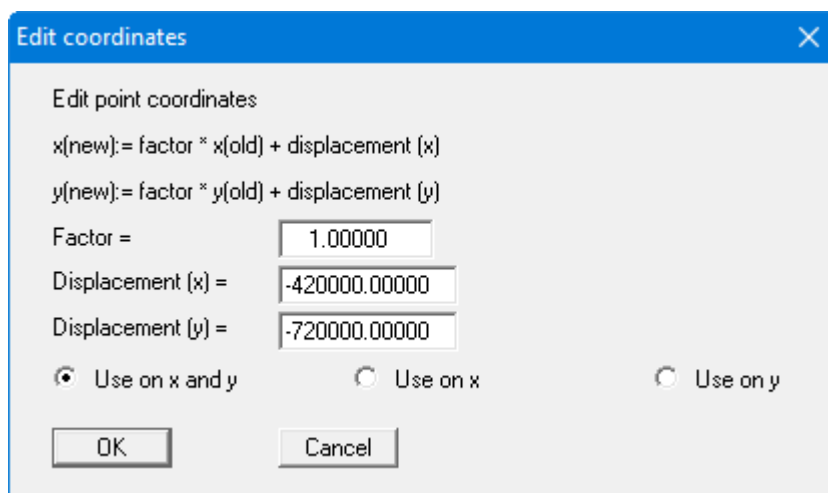

8.11 GGU-TIME-GRAPH: "Edit coordinates" menu item

Using this menu item you can edit the coordinates of all data points (see dialog box in the previous section). For example, if you used an incorrect scale during input, it can be corrected here by applying an appropriate factor. You can apply the factor to one direction only if necessary, i.e. to the x or to the y coordinate.

The coordinates can be displaced in x- or y-direction in order to achieve correct positioning.

If your point coordinates are given in eastings and northings you can displace them by the required hundred thousand and ten thousand value. The resulting coordinate values are in the thousands range.

8.12 GGU-TIME-GRAPH: "Labelling x and y axes" menu item

Labelling can be entered for the x and y axes of the contour visualisation.

9 Section menu

9.1 GGU-TIME-GRAPH: General notes on sections

You can generate true-to-scale sections, visualising measured data from various points for a user-defined date as hydrographs.

9.2 "Define" menu item

9.2.1 GGU-TIME-GRAPH: Define section course

After going to this menu item you will see the following dialog box with explanations of how to define a section



If the **"Search for appropriate dates loosely"** check box is not clicked, the following section will only allow the dates for which data is available at all data points to be selected.


By clicking on **"Load section"** it is possible to load a section course saved during a previous session. If you have already defined a section during the current session, you can reload this section using the **"Prev. section"** button. In both cases the section course is first displayed on the screen and must be confirmed by pressing the **[Return]** or **[Enter]** key.

If you click **"OK"**, you can define a new section course. The interpolation mesh and data points are displayed on the screen to assist you. The data points are clicked in the sequence required (the later section visualisation is always from left to right) using the left mouse button. The last point defined can be reset using the right mouse button. Here, too, the section course is completed by pressing **[Return]** or **[Enter]**.

9.2.2 GGU-TIME-GRAPH: Select date for section visualisation

After confirming the section course the following dialog box opens in all cases, allowing you to define the dates for which the measured data should be visualised as hydrographs in section. It is possible to visualise up to 40 date values. To specify the dates click on the "Arrow down" key and then click the required dates from the drop-down list boxes.

At the end of each list you can select "**Maximum**", "**Minimum**" or "**Mean**". The selected value is then determined for all available dates for each data point.

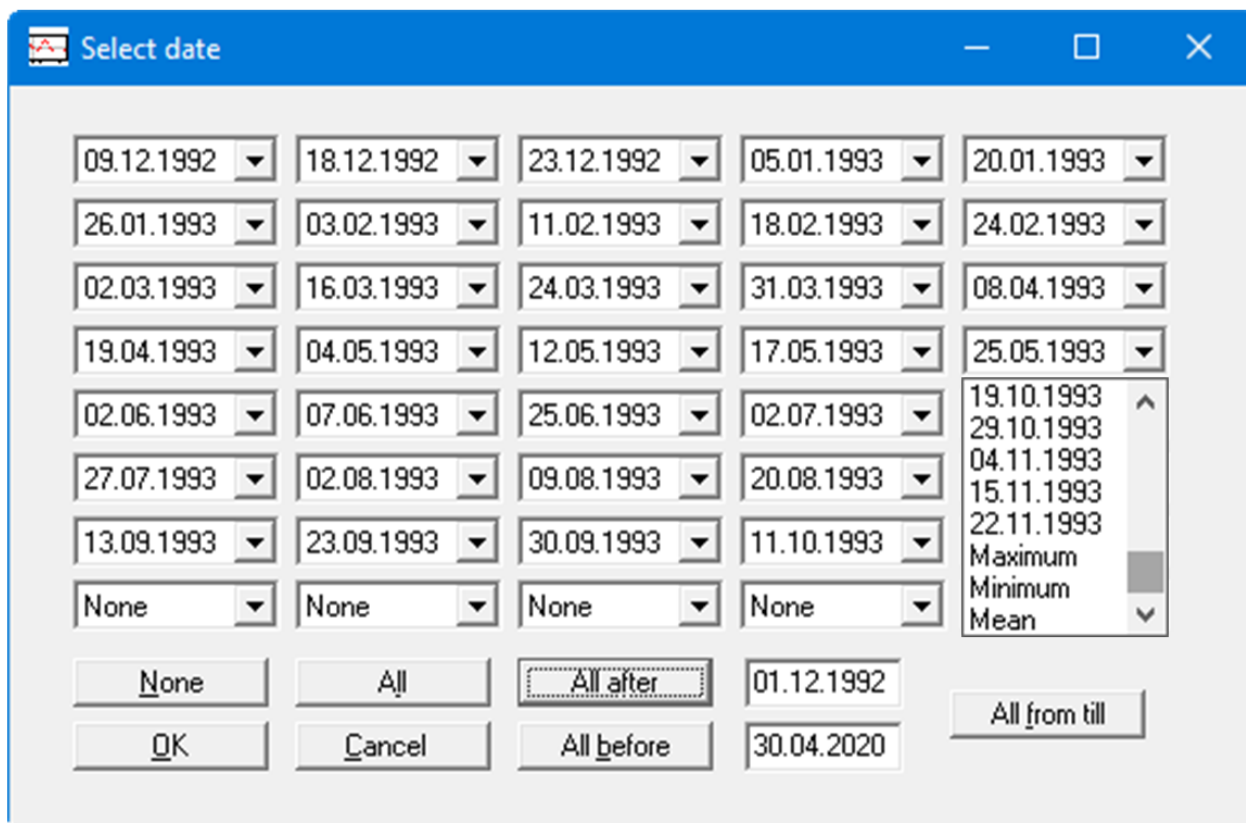

The complete list of dates can be switched on or off using the "**None**" and "**All**" buttons. If you have selected a number of dates, for example, and would then like to visualise only one date, first turn off all dates using "**None**" and then select the required date.

Alternatively, you can select all data before or after a specific date. To achieve this, enter the required date in the date box and click "**All after**" or "**All before**". You can also use the two date boxes to define a start and an end date for a given period. Then click the "**All from till**" button.

If the input is confirmed by pressing "**OK**" a dialog box opens allowing preferences for the section visualisation to be defined. The same dialog box opens by going to the "**Section/Preferences**" menu item.

9.3 GGU-TIME-GRAPH: "Preferences" menu item


The following dialog box opens for graphical visualisation of the hydrographs:



If the "**Section in colour**" check box in the "**Preferences**" group box is activated the whole area of the data is filled. The colours and hatching defined in the menu item "**Section/Pens (section)**" are used.

You can also display your measured data in section as a **fence diagram**.

In the "**Operations**" group box the current section can be saved to a file using the "**Save section**" button. The coordinate and scale settings, and all **Mini-CAD** elements displayed in the current section are saved with the file. This can be used, for example, to define the course of a section for a special embankment profile, enabling long-term observation and visualisation of the phreatic lines, as the following figure illustrates.

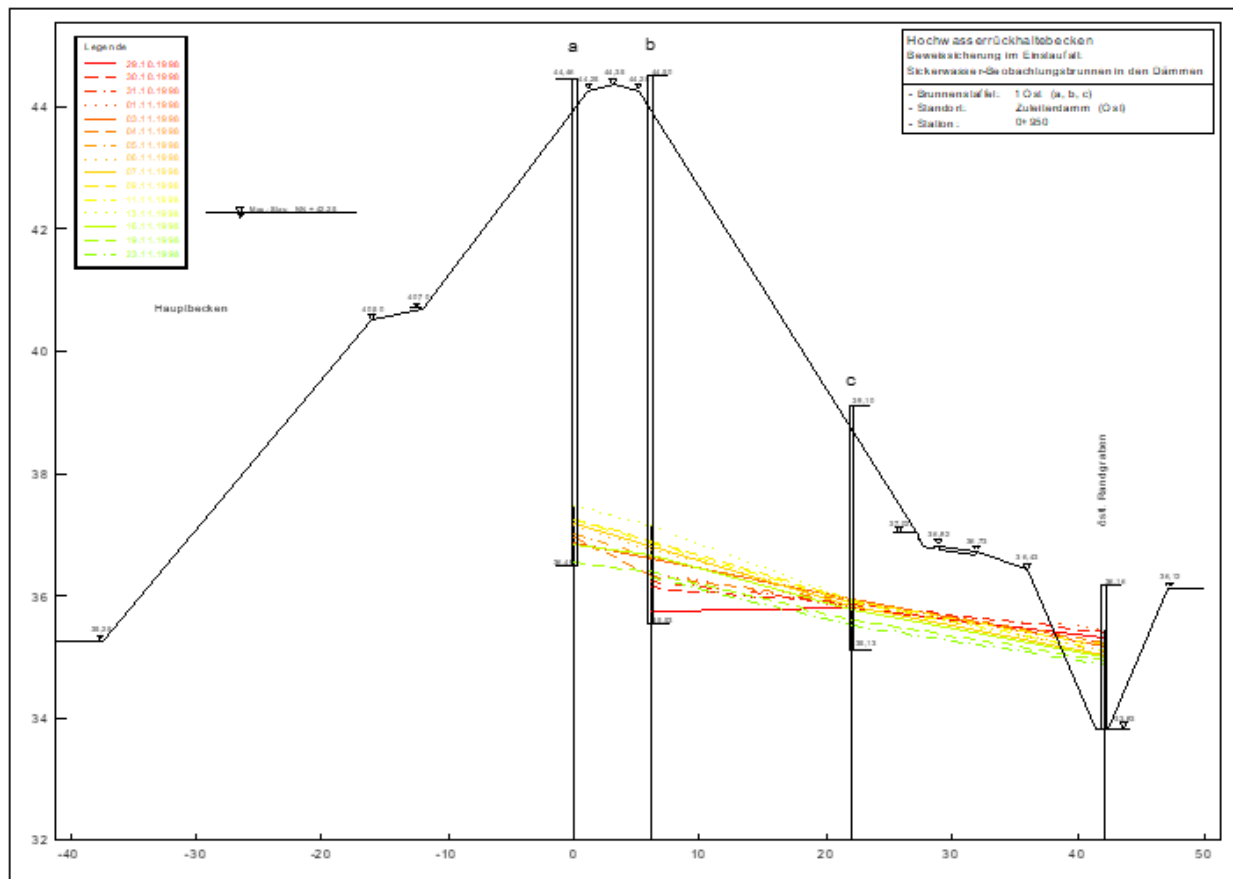

The section will be drawn on the screen after clicking the "**Display**" button. In addition, a legend showing the date allocation to the graph used and a location map, showing the system outline and the defined section, are automatically displayed. These legends (data and section course) are activated by default, but can be deactivated in the menu items "**Graphics preferences/Section course legend**" and "**Graphics preferences/Date legend**".

9.4 GGU-TIME-GRAPH: "Pens (section)" menu item

In section, a hydrograph is displayed with a separate pen for each selected date. The colour, dashing (type/length) and pen thickness can be edited for each of the 40 possible date values in the following dialog box.



The default setting shows a course from red to blue for 40 date values. If considerably less dates than this are visualised in a section it may make sense to define different colours. Different colours can be defined using the numbered buttons. One colour can be assigned to all values using the "**For all**" button.


You can change the sequence of the defined pens using the "**Delete**", "**Insert**" and "**Swap**" buttons. You can save your own pen collection to a file using the "**Save**" button and subsequently load it again at any time. If you save the file at the program level using the name "**GGU-TIME-GRAPH.gng_stf**", it is automatically loaded every time the program starts.

10 Graphics preferences menu

10.1 GGU-TIME-GRAPH: "Refresh and zoom" menu item

The program works on the principle of ***What you see is what you get***. This means that the screen presentation represents, overall, what you will see on your printer. In the last consequence, this would mean that the screen presentation would have to be refreshed after every alteration you make. For reasons of efficiency and as this can take several seconds for complex screen contents, the screen is not refreshed after every alteration.

If, e.g., after using the zoom function (see below), only part of the image is visible, you can achieve a complete view using this menu item.

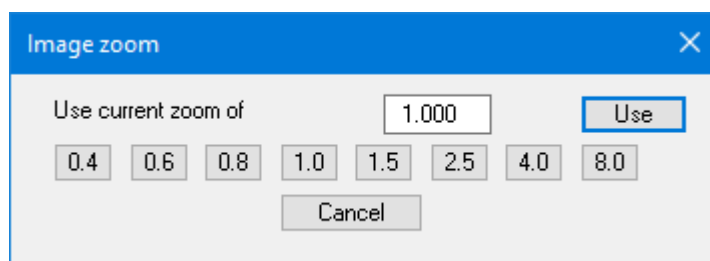

A zoom factor between 0.4 and 8.0 can be entered in the input box. By then clicking on "**Use**" to exit the box the current factor is accepted. By clicking on the "0.4", "0.6", etc. buttons, the selected factor is used directly, and the dialog box closed.

It is much simpler, however, to get a complete overview using [**Esc**]. Pressing [**Esc**] allows a complete screen presentation using the zoom factor specified in this menu item. The [**F2**] key allows screen refreshing without altering the coordinates and zoom factor.

10.2 GGU-TIME-GRAPH: "Zoom info" menu item

An info box informs you about the activation and options of the zoom function.

The quickest way to enlarge a specific section of the screen is to open a zoom window by holding down the [**Ctrl**] key and the mouse button.

10.3 GGU-TIME-GRAPH: "Pen colour and width" menu item

In order to enhance the clarity of the graphics you can preset the pen settings for various graphic elements in the GGU programs

You can change the pen widths for the elements listed in the dialog box and adjust the pen and/or fill colours by clicking on the button with the element name. In some GGU programs you can also define a line colour for selected elements.

For the graphic output of colours on **monochrome printers** (e.g. laser printers), colours are replaced by an equivalent shade of grey. In the case of very light colours, the corresponding graphic elements are then barely visible on the printer. In such cases, it makes sense to change the colour setting to darker colours.

10.4 GGU-TIME-GRAPH: "Legend font selection" menu item

With this menu item you can switch to a different true-type font. All available true-type fonts are displayed in the dialog box.

10.5 GGU-TIME-GRAPH: "Toolbar preferences" menu item

After starting the program, a horizontal toolbar for menu items appears below the program menu bar. If you would rather work with a popup window with several columns, you can specify your preferences using this menu item. The smart icons can also be switched off.

At the bottom of the program window, you find a status bar with further information. You can also activate or switch off the status bar here. The preferences will be saved in the "**GGU-BORELOG.alg**" file (see menu item "**Graphics preferences/Save graphics preferences**") and will be active at the next time the program is started.

By clicking on the tools (smart icons) for the menu items you can directly reach most of the program functions. The meaning of the smart icons appears as a text box if you hover with the mouse pointer over the tools. Some of the tool functions cannot be called up via normal menu titles and menu entries.

Not all of the icons described below are available in all GGU programs.

**"Next page"/"Previous page"**

You can use these icons to scroll forwards and backwards between individual pages. In many GGU programs, you can use this in the **output table representation**.

**"Select page" or "Diagram/Output table"**

If you are in the **output table representation**, you can use this symbol to jump to a specific page or switch back to the normal display, i.e. your graphic display.

**"Zoom out"**

If you have previously zoomed in, this tool returns to a full screen display.

**"Zoom (-)"/"Zoom (+)"**

With the zoom functions you can zoom in or out of parts of the image, by clicking the left mouse button.

**"Copy/print area"**

Use this tool to copy only parts of the graphics in order to paste them, e.g. to a report. You will see information on this function and can then mark an area, which is copied to the clipboard or can be saved in a file. Alternatively, you can send the marked area directly to your printer (see **"Tips and tricks"**).

**"Colour on/off" or "Colour/hatching"**

If you want to remove the colour from the system display, e.g. to create a black and white printout, you can do this using this on/off switch.

In several GGU programs, 4 colour and hatching settings are possible via this icon, which you can click through in sequence. A colour filled representation is the default setting, the next click shows the hatching, then coloured and hatched. The fourth click shows a representation with neither colour nor hatching. The next click starts again.

**"Move object"**

Use this icon to position legends and diagrams at the desired position on the output sheet.

**"Undo move object"**

By clicking this icon the last performed movement of graphical elements made using the [F11] function key or the menu item **"Output preferences/Move objects"** can be undone.



"Restore move object"

By clicking this symbol, the last object movement undo carried out using "Undo move object" can be restored.



"Construction phase back"/"Construction phase forward"

If you are in the display of construction phases, you can use these icons to scroll back and forth between the individual construction phases.

10.6 GGU-TIME-GRAPH: "3D toolbar" menu item

This menu item allows you to choose a pop-up window with tools for advanced editing of the three-dimensional graphics. If you hover with the mouse pointer over the tools, the meaning of the Smart icons appears in a text box.

The "**Rotation by ...**" tool allows you to rotate the graphics around one of the three axes. The plus and minus signs designate the direction of rotation. The angle of rotation can be adjusted as wished using the



tool.

10.7 GGU-TIME-GRAPH: "General legend" menu item

By activating the "**Show legend**" check box, a **General legend** can be displayed on the screen. The legend is only displayed in the hydrograph visualisation if the file name display is activated, because otherwise no other entries are made in the legend.



The shape and appearance of the legend can be altered. You can define and edit the position of the legend using the values "**x**" and "**y**". You control the size of the legend using "**Font size**" and "**max. no. of lines**"; where necessary, several columns are used. The fastest way to modify the position of the legend is to press the [**F11**] function key and then to pull the legend to the new position with the left mouse button pressed.

By activating the "**Short**" or "**Long**" option buttons the current file name can be shown in the legend, either with or without the path.

If a heading is entered or the check box "**Date as heading**" is activated in the dialog boxes accessed via the "**Presentation format (contours)**" and "**Presentation format (gradients)**" buttons in the menu item "**Contours/Display**", the heading and the currently selected data date are also displayed in the legend.

If nothing is entered in the check boxes mentioned above, the **General legend** will only be displayed if one of the file name display check boxes in the above dialog box is activated.

10.8 GGU-TIME-GRAPH: "Hydrographs legend" menu item

When visualising hydrographs a descriptive legend can be displayed with the allocations for lines and markers to the hydrographs of the selected data. The position and appearance of the legend can be modified if the **"Show legend"** check box in this menu item's dialog box is activated.



A text can be specified as legend header. You can define and edit the position of the legend using the values **"x"** and **"y"**. You control the size of the legend using **"Font size"** and **"Max. no. of lines"**; where necessary, several columns are used. The fastest way to modify the position of the legend is to press the **[F11]** function key and then to pull the legend to the new position with the left mouse button pressed.

If you have defined visualisation of your data points on 2 data axes, activate the **"Label hydrographs with '2'"** check box. This means that all data points from the 2nd diagram are appropriately identified.

The legend can be provided with a coloured background fill; the colour can be edited via the **"Background colour"** button.

10.9 GGU-TIME-GRAPH: "Section course legend" menu item

Once the section is complete you can have the location of the section displayed in plan. The triangle mesh can also be visualised.



The position of the legend can be defined and edited using the values **"x"** and **"y"**, **"Width"** and **"Height"**. You can edit the font size of the entered heading and the colour of the background. The triangular mesh in the sketch can be provided with a coloured background. The colour can be edited using the **"Mesh colour"** button if the **"Coloured mesh"** check box is activated.

10.10 GGU-TIME-GRAPH: "Date legend" menu item

If the hydrographs are visualised in a section a descriptive legend containing an allocation of the graphs to the selected dates can be displayed. The position and appearance of the legend can be modified if the **"Show legend"** check box in this menu item's dialog box is activated.



A text can be specified as legend header. You can define and edit the position of the legend using the values **"x"** and **"y"**. You control the size of the legend using **"No. of lines"**, **"Dash length"** and **"Font size"**; where necessary, several columns are used. The fastest way to modify the position of the legend is to press the **[F11]** function key and then to pull the legend to the new position with the left mouse button pressed. The legend can be provided with a coloured background fill; the colour can be edited via the **"Background colour"** button.

10.11 GGU-TIME-GRAPH: "Move objects" menu item

Select this menu item in order to position a legend at the desired position on the output sheet. You can also move objects by pressing **[F11]** and then positioning the legend box with the left mouse button pressed. In that case an info-box appears no more.

10.12 GGU-TIME-GRAPH: "Load graphics preferences" menu item

You can reload a graphics preferences file into the program, which was saved using the **"Graphics preferences/Save graphics preferences"** menu item. Only the corresponding data will be refreshed.

10.13 GGU-TIME-GRAPH: "Save graphics preferences" menu item

Some of the preferences you made with the menu items of the **"Graphics preferences"** menu can be saved to a file. If you select **"GGU-TIME-GRAPH.alg"** as file name, and save the file on the same level as the program, the data will be automatically loaded the next time the program is started and need not be entered again.

11 Page size + margins menu

11.1 GGU-TIME-GRAPH: "Page size and margins" menu item

Page format preferences can be defined in a dialog box. The dialog box contains five group boxes.

Page size

Page height

☒ User-defined [mm]:

☐ A4 height ☐ A3 height ☐ A2 height

☐ A1 height ☐ A0 height

Page width

☒ User-defined [m]:

☐ A4 width ☐ A3 width ☐ A2 width

☐ A1 width ☐ A0 width

Fold marking

☒ Bottom [mm]:

☐ Right [mm]:

Page margins in mm

Left = Right =

Top = Bottom =

Plot margins in mm

Left = Right =

Top = Bottom =

☒ With borders ☒ With plot margins

☒ Contours with axes

In the "**Page height**" and "**Page width**" group boxes the required page formats can be selected directly by clicking or user-defined values entered. The A3 format is set as default. The program automatically draws thin cutting borders around the page, which are required when using a plotter on paper rolls. The borders can be switched off using the "**With borders**" check box. Markers for the bottom and right-hand edges can be activated in the "**Fold marking**" group box.

"**Page margin**" defines the position of a frame as a distance to the margins. This frame encloses the subsequent diagram. You can switch off the frame deactivating the "**With margins**" check box. The "**Plot margin**" define a set distance between the page margin and the actual **drawing area** in which the graphical evaluation of your input is presented. If the "**Contours with axes**" check box is deactivated the x- and y-axis labelling is switched off in the subsequent contour visualisation.

11.2 GGU-TIME-GRAPH: "Auto-resize" menu item

When this menu item is utilised the program calculates the image coordinates, ensuring that all data points are displayed. In a hydrograph visualisation this means that all measured data are visualised with an adjustment on the y-axis to the minimum and maximum heights for the complete time range (x-axis). In a contour line visualisation a true-to-scale visualisation of the data points and contours for both coordinate axes is achieved. This can be useful,

- if, after a hydrograph visualisation, you want to include further hydrographs lying outside of the original image coordinates.
- if, after graphical visualisation of contour lines, new data points are added, lying outside of the original image coordinates.
- If, despite all your efforts, graphics cannot be correctly visualised on the screen. In a previous step, you probably altered the image coordinates to such an extent that visible graphic elements are no longer within the area seen on the screen.

This function can also be accessed using the [F9] function key. "**Auto-resize time axis**" menu item


Only the x-axis (time values) coordinates are recalculated, for example if they were previously included in a different section. The measured data (y-coordinate) visualisation remains unchanged. This function can also be accessed by pressing [F8].

11.3 GGU-TIME-GRAPH: "Auto-resize measured data axis" menu item

Only the y-axis coordinates are recalculated, i.e. all measured data are readjusted to the minimum and maximum heights. The time axis remains unchanged for the previously defined section. This function can also be accessed by pressing [F7].

11.4 GGU-TIME-GRAPH: "Manual resize (editor)" menu item


The image coordinates can be modified by direct numerical input in a dialog box. The dialog box displays the existing preferences for the currently selected visualisation. In the dialog box example shown, which opens for **hydrograph visualisation**, an earliest and a latest date can be specified for the x-axis and a minimum and a maximum measured data value for the y-axis.

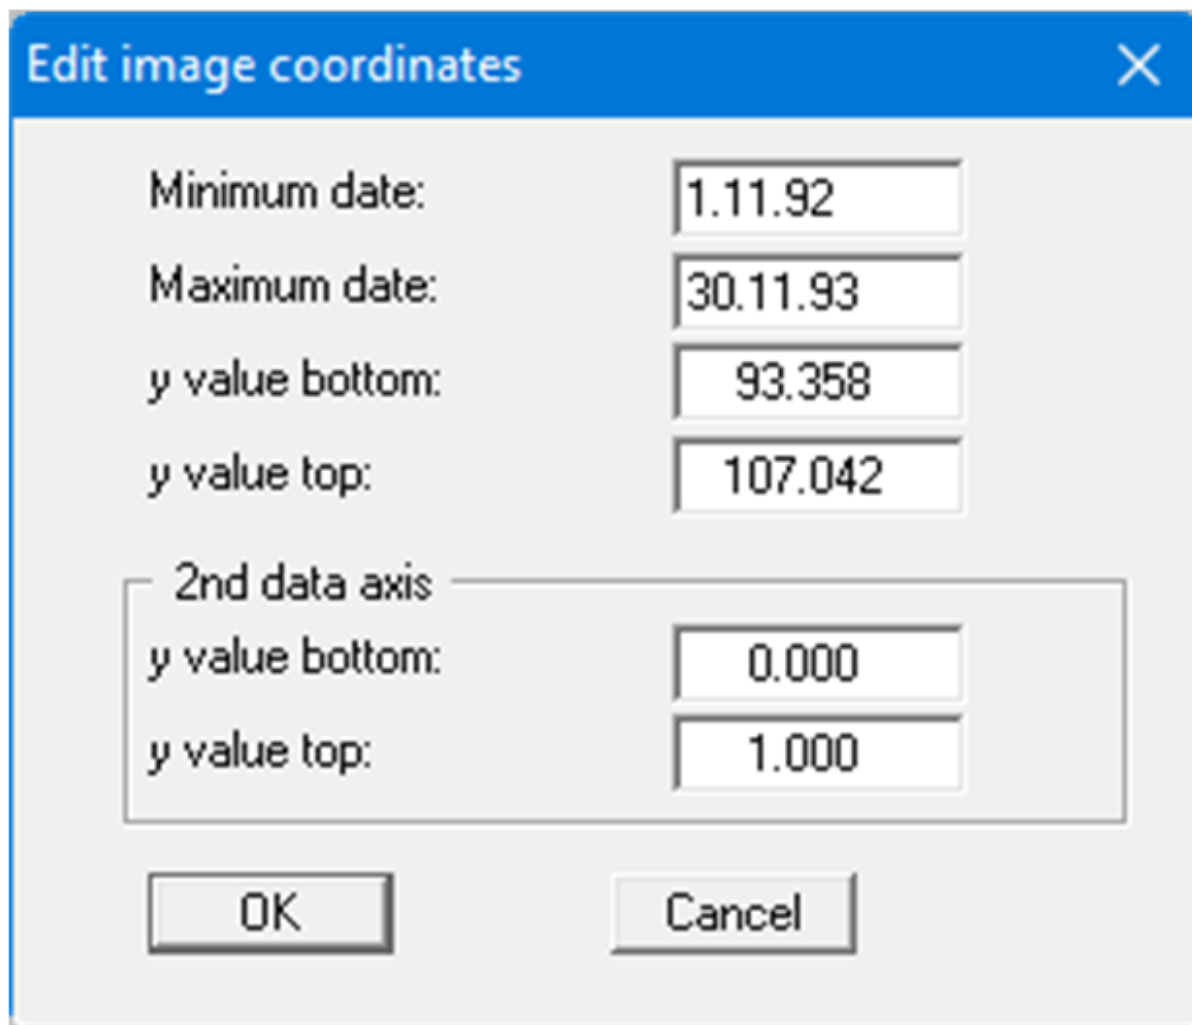

Edit image coordinates	
Minimum date:	1.11.92
Maximum date:	30.11.93
y value bottom:	93.358
y value top:	107.042
2nd data axis	
y value bottom:	0.000
y value top:	1.000
OK Cancel	

If you have activated visualisation of data points on a 2nd measured data axis, you can also define the upper and lower y values for this 2nd axis.

The lower and left image boundary and the scale in x- and y-direction are defined for **contour or section visualisation**. In the same way it is possible to always use the same scale and the same coordinates for different sections, to facilitate direct comparisons, for example.

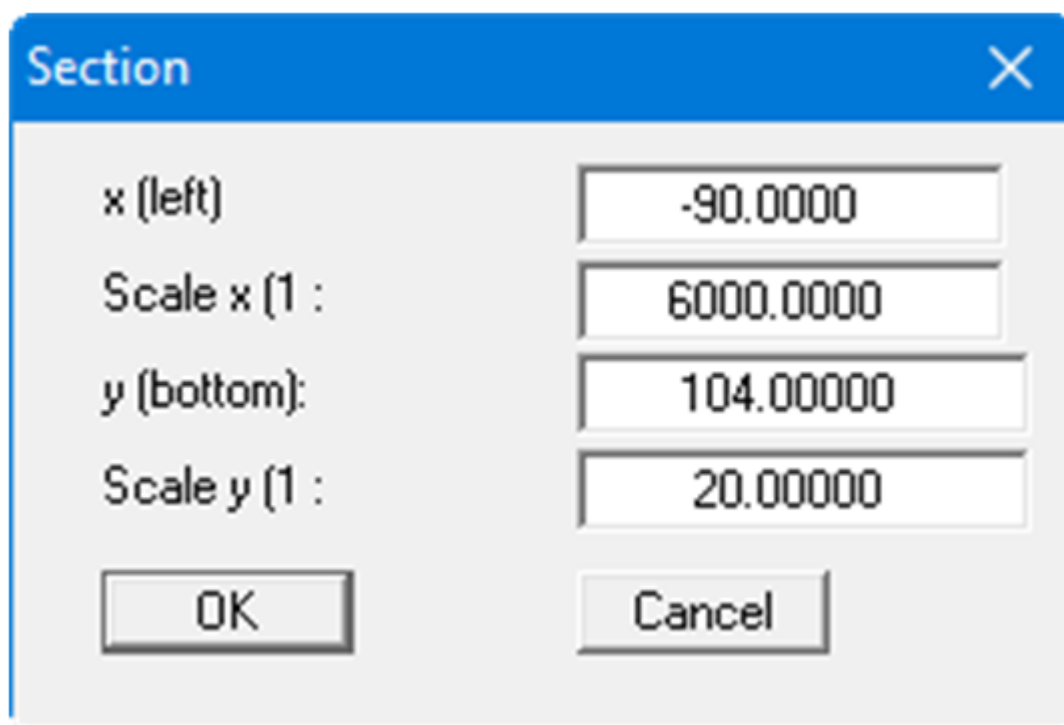

11.5 GGU-TIME-GRAPH: "Manual resize (mouse)" menu item

You can alter the image coordinates graphically with the mouse. In the dialog box you are offered two choices.

- You can use the coordinates of a section of the visualisation as the new image coordinates by marking the desired area with the mouse, pressing the left mouse button and holding the **[Ctrl]** and **[Shift]** keys. The scales of the x- and y-axes are adjusted accordingly. If the previous proportions (scale x-direction/scale y-direction) need to be retained, the **"Proportional section"** check box must be activated.
- By activating the **"Redefine origin"** button you can change the image coordinates without altering the scale. In this way, you can quickly achieve the desired presentation with a suitably defined scale without annoying trial and error with the x/y coordinates.

12 Info menu

12.1 GGU-TIME-GRAPH: "Copyright" menu item

You will see a copyright message and information on the program version number.

The "**System**" button shows information on your computer configuration and the folders used by the GGU program.

12.2 GGU-TIME-GRAPH: "Maxima" menu item

You will see information on the default program maxima.

12.3 GGU-TIME-GRAPH: "Help" menu item

The manual is opened as a PDF document. The help function can also be accessed using the **[F1]** function key.

12.4 GGU-TIME-GRAPH: "GGU on the web" menu item

Using this menu item, you can access the [GGU Software website](#).

Check the page of your program module at regular intervals for information about updates and changes. On the "**Changelogs**" subpage, you can also subscribe to an e-mail notification that informs you of all changes on a monthly basis.

12.5 GGU-TIME-GRAPH: "GGU support" menu item

This menu takes you directly to the [GGU Software Support Portal](#).

Here you can enter your support request directly and upload your edited GGU program file.

12.6 GGU-TIME-GRAPH: "Meteorology + pedology" menu item

Using this menu item you can determine certain meteorological and pedological parameters, e.g. evaporation rates according to DVWK Fact Sheet 238/1996 '**Determination of evaporation on land and over water**' (*Ermittlung der Verdunstung von Land- und Wasserflächen*).

12.7 GGU-TIME-GRAPH: "What's new?" menu item

You will see information on program improvements in comparison to older versions.

12.8 GGU-TIME-GRAPH: "Language preferences" menu item

This menu item allows you to switch the menus and the graphics from German to English and vice versa. To work in German, deactivate the two check boxes "**Dialoge + Menüs übersetzen (translate dialogues, menus)**" und "**Graphiktexte übersetzen (translate graphics)**".

Alternatively, you can work bilingually, e.g. with German dialog boxes but with graphic output in English. The program always starts with the language setting applicable when it was last ended.